

HARDWARE PACK

TOOLS NEEDED FOR ASSEMBLY

- #2 Phillips screwdriver (long and short)
- 1/4" Slotted screwdriver (long and short)
- Adjustable wrench
- Pliers

No.	Description	Part Number	Qty.
1	1/4"-20UNCx38 Screw	20120-13038-250	6
2	1/4"-20UNCx16 Screw	20120-13016-250	30
3	NO.10-24UNC x13 Screw	20124-10013-250	19
4	ST4.8X10 Tapping Screw	22500-48010-810	2
5	NO.8-32 X 3/8, Philips Flat Head	20332-08010-250	3
6	ST4.2X10 Tapping Screw	22500-42010-137B	15
7	φ7 Fiber washer	G501-0054-9100	10
8	1/4"-20UNC Flange Nut	31220-13000-250	2
9	NO.10-24UNC Flange Nut	31224-10000-250	1
10	M4 Wing Nut	33301-04000-032	1
11	Venturi Clip, Side Burner	G405-0019-9200	1
12	Wheel Lock Pin	G350-0026-9000	1



Caution:

Sheet metal can cause injury. Wear gloves when installing the barbecue.



BEFORE ASSEMBLING THIS BARBECUE, READ THE INSTRUCTIONS CAREFULLY.

Assemble the barbecue on a flat, clean surface. Grill is heavy. Two people are recommended to assemble this barbecue.

PARTS LIST FOR G53236

Item No.	Qty.	Description	Part No.
AA	1	Top Lid Assembly	G532-J100-01
AB	1	Lid Handle	G532-0056-02
AC	1	Thermometer	G363-0036-01
AD	1	Thermometer Bezel	G363-0006-01
AE	2	Screw, Top Lid	G466-0007-01
AF	2	Lid Bumper, Front	G527-0002-02
AG	2	Lid Bumper, Rear	G303-0038-01
BA	1	Burner Box Assembly	G532-2700-01
BB	4	Main Burner	G532-K200-01
BC	4	Carryover Assembly	G614-0095-01
BD	4	Heat Distribution Plate	G532-0016-01
BE	1	Grease Channel	G532-0015-01
BF	4	Cooking Grate	G532-0017-02
BG	1	Cleaning Tool	G532-0049-01
BH	1	Warming Rack	G532-0018-01
BI	1	Match Holder	G501-0068-01
BJ	1	Grease Channel Shield	G532-0063-01
BK	4	Main Burner Brace	G466-0047-01
BL	1	Griddle	G532-0088-01
CA	1	Manifold Assembly	G532-G400-01
CB	1	Regulator	G532-0086-01
CC	1	Side Stove Valve	G532-0085-01
CD	1	Metal Hose, Side Stove	G401-0068-01
CE1	1	Electronic Ignition Assembly	G532-0019-0A
CE2	1	Ignition Battery Cover	G532-0019-02
CE3	1	Instastart™ Ignition Button	G532-0082-01
CF	1	Electrode Set, Main Burner	G515-0067-01
CG	5	Control Knob	G363-3400-01
CH	5	Knob Bezel	G363-0011-01
CI	1	Control Panel	G532-0087-02
CJ	1	Front Brace	G532-9000-01
CK	1	Grease Cup - Burner Box	G416-0015-01
CL	2	Grease Cup Rails	G466-0034-01
CM	1	Upper Back Panel	G532-0022-01
CN	1	Lower Back Panel	G532-0090-01
CO	1	Heat Shield - Burner Box	G532-0023-01
CP	1	Tank Exclusion Wire	G532-0077-01

Item No.	Qty.	Description	Part No.
DA	1	Side Stove Side Shelf, Left	G532-0900-02
DB	1	Side Shelf Fascia, Left	G532-H200-02
DC	1	Side Shelf Table Rear Brace, Left	G532-1300-02
DD	1	Side Stove Burner	G532-1400-01
DE	1	Side Stove Support Drip Pan	G515-0083-03
DF	1	Electrode Set, Side Stove	G515-0039-02
DG	1	Side Stove Lid	G532-0029-03
DH	1	Side Stove Cooking Grate	G501-0077-01
DI	1	Side Shelf Table, Right	G532-0092-02
DJ	1	Side Shelf Fascia, Right	G532-H400-02
DK	1	Side Shelf Table Rear Brace, Right	G532-1700-02
DL	1	Grease Cup Holder - Flare-Free	G363-0023-02
DM	1	Grease Cup - Flare-Free	G363-0023-02
EA	1	Cart Side Panel, Left	G532-G800-02
EB	1	Cart Side Panel, Right	G532-G900-02
EC	1	Left Door Assembly	G532-B400-01
ED	1	Right Door Assembly	G532-0070-01
EE	2	Door Handle	G532-0026-02
EF	1	Bottom Shelf	G532-G700-02
EG	2	Locking Castor	G350-0023-01
EH	2	Castor	G350-0024-01
EI	2	Door Magnet Assembly	G527-0037-01
EJ	1	Left Heat Shield	G532-0093-01
EK	1	Right Heat Shield	G532-0094-01
EL	1	Ignition Box	G363-0040-01
F1	1	Hardware Pack	G532-B035-01
F2	1	Assembly Manual	G532-M036-01
F3	1	Safe Use and Care Manual	G363-M023-02
F4	2	Tank Support	G362-0060-01

EXPLODED DIAGRAM FOR G53236

