

# HARDWARE PACK

## TOOLS NEEDED FOR ASSEMBLY

- #2 Phillips screwdriver (long and short)
- 1/4" Slotted screwdriver (long and short)
- Adjustable wrench
- Pliers

No.	Description	Part Number	Qty.
1	1/4"-20UNCx50 Screw	20120-13050-250	4
2	1/4"-20UNCx38 Screw	20120-13038-250	6
3	1/4"-20UNCx16 Screw	20120-13016-250	50
4	1/4"-20UNC Screw	G353-0014-9000	4
5	NO.10-24UNCX16 Screw	20124-10016-250	8
6	NO.10-24UNCX13 Screw	20124-10013-250	27
7	NO.10-24UNCX10 Screw	20124-10010-250	2
8	ST4.8X10 Tapping Screw	22500-48010-810	2
9	NO.8-32 X 3/8, Philips Flat Head	20332-08010-250	3
10	ST4.2X10 Tapping Screw	22500-42010-137B	17
11	ST4.2X6 Tapping Screw	22500-42006-137	1
12	NO.10 Screw	G537-0015-9000	2
13	Screw for Vent	G531-0048-9081	2
14	1/4"-20UNC Flange Nut	31220-13000-250	6
15	NO.10-24UNC Flange Nut	31224-10000-250	1
16	Rubberized Washer	G501-0054-9100	9
17	Aluminum Washer	G466-0042-9000	18
18	φ5 Lock Washer	41400-05000-250	10
19	Compression Spring	G528-0058-9000	2
20	Hitch Pin	G515-0013-9000	2
21	Wheel Lock Pin	G350-0026-9000	1
22	Ash Sweep Handle	G531-0047-01	1

**⚠ Caution:**  
Sheet metal can cause injury. Wear gloves when installing the grill.

 <p>1 1/4"-20UNCx50 Screw X 4</p>	 <p>2 1/4"-20UNCx38 Screw X 6</p>	 <p>3 1/4"-20UNCx16 Screw X 50</p>
 <p>4 1/4"-20UNC Screw X 4</p>	 <p>5 NO.10-24UNCX16 Screw X 8</p>	 <p>6 NO.10-24UNCX13 Screw X 27</p>
 <p>7 NO.10-24UNCX10 Screw X 2</p>	 <p>8 ST4.8X10 Tapping Screw X 2</p>	 <p>9 NO.8-32 X 3/8, Philips Flat Head X 3</p>
 <p>10 ST4.2X6 Tapping Screw X 17</p>	 <p>11 ST4.2X6 Tapping Screw X 1</p>	 <p>12 NO.10 Screw X 2</p>
 <p>13 Screw for Vent X 2</p>	 <p>14 1/4"-20UNC Flange Nut X 6</p>	 <p>15 NO.10-24UNC Flange Nut X 1</p>
 <p>16 Rubberized Washer X 9</p>	 <p>17 Aluminum Washer X 18</p>	 <p>18 φ5 Lock Washer X 10</p>
 <p>19 Compression Spring X 2</p>	 <p>20 Hitch Pin X 2</p>	 <p>21 Wheel Lock Pin X 1</p>
 <p>22 Ash Sweep Handle X 1</p>		

## BEFORE ASSEMBLING THIS BARBECUE, READ THE INSTRUCTIONS CAREFULLY.

Assemble the barbecue on a flat, clean surface. Grill is heavy. Two people are recommended to assemble this barbecue.

# PARTS LIST FOR G53721

Item No.	Qty.	Description	Part No.	Item No.	Qty.	Description	Part No.
AA	1	Charcoal Lid	G537-6000-01	CN	1	Grease Cup, Burner Box	G416-0015-01
AB	1	Charcoal Lid Handle	G537-6100-01	CO	2	Grease Cup Rails	G466-0034-01
AC	1	Lid Vent	C350-0019-01	CP	1	Upper Back Panel	G532-0022-01
AD	1	Lid Hinge	G537-6200-01	CQ	1	Lower Back Panel	G532-0090-01
AE	1	Gas Lid Assembly	G532-G500-01	CR	1	Heat Shield, Burner Box	G532-0023-01
AF	1	Gas Lid Handle	G532-0056-01	CS	1	Left Heat Shield	G532-0093-01
AG	1	Thermometer	G363-0035-01	CT	1	Back Brace, Charcoal Side	G537-1300-01
AH	1	Thermometer Bezel	G532-0006-01	CU	1	Right Heat Shield	G537-0026-01
AI	2	Screw for Top Lid	G466-0007-01				
AJ	2	Lid Bumper, Front	G527-0002-02	DA	1	Right Side Shelf Table Base	G363-7200-01
AK	2	Lid Bumper, Rear	G303-0038-01	DB	1	Right Side Shelf Fascia	G537-3800-01
				DC	1	Grease Cup Holder, Flare-Free	G532-0031-02
BA	1	Fire Bowl	G537-0010-01	DD	1	Grease Cup, Flare-Free	G532-0031-02
BB	1	Charcoal Lighting Burner	G537-0800-02	DE	1	Right Side Shelf Table Rear Brace	G537-1100-01
BC	1	Electrode Set, Charcoal Lighting Burner	G458-9201-01	DF	2	Support Bracket A	G363-1300-01
BD	1	Ash Sweep	C305-0006-02	DG	2	Support Bracket B	G363-1400-01
BE	1	Ash Sweep Handle (#23)	G531-0047-01	DH	2	Side Shelf Table	G537-1200-01
BF	1	Charcoal Grate	G537-0012-01				
BG	1	Cooking Grate, Charcoal Side	C305-0300-01	EA	1	Left Cart Side Panel	G537-4300-01
BH	1	Fire Bowl Vent	C305-0400-02	EB	1	Middle Cart Panel	G537-3400-01
BI	1	Fire Bowl Vent Handle	C305-0009-01	EC	1	Right Cart Side Panel	G532-G900-01
BJ	1	Ash Catcher	C305-0010-01	ED	1	Support Bracket, Regulator	G466-00C3-01
BK	1	Ash Catcher Handle	C305-0011-01	EE	1	Bottom Shelf	G537-2900-01
BL	1	Burner Box Assembly	G532-3100-01	EF	3	Locking Castor	G350-0023-01
BM	3	Main Burner	G532-K200-01	EG	3	Castor	G350-0024-01
BN	1	Electrode Set, Main Burner	G515-0067-01	EH	1	Lower Front Panel	G537-0004-01
BO	2	Carryover Assembly	G532-0014-01	EI	1	Ash Catcher Access door	G537-4400-01
BP	3	Heat Distribution Plate	G532-0016-01	EJ	2	Magnet, Ash Catcher Access Door	G213-0022-01
BQ	1	Grease Channel	G532-0015-01	EK	1	Handle, Ash Catcher Access Door	G353-0024-01
BR	4	Cooking Grate, Gas Side	G532-0017-02	EL	1	Stopper, Ash Catcher Access Door	G537-0003-02
BS	1	Flare Free Cleaning Tool	G532-0049-01	EM	1	Interior Cart Divider	G537-0005-01
BT	1	Warming Rack	G532-0018-01	EN	1	Left Door Assembly	G532-9100-01
BU	1	Match Holder	G501-0068-01	EO	1	Right Door Assembly	G532-9200-01
BV	1	Grease Channel Shield	G532-0063-01	EP	2	Handle, Door Assembly	G532-0026-01
BW	1	Griddle	G532-0088-01	EQ	2	Magnet, Door Assembly	G527-0037-01
				ER	1	Ignition Box	G363-0040-01
CA	1	Control Panel, Charcoal Side	G537-0025-01	ES	1	Burner Plate	G537-0028-01
CB	1	Fire Bowl Mounting Shelf	G537-0600-01				
CC	3	Tool Hooks	G360-0016-01	F1	1	Hardware Pack	G537-B021-01
CD	1	Manifold Assembly	G537-2800-01	F2	1	Assembly Manual	G537-M021-01
CE3	1	Instastart™ Ignition Button	G532-0082-01	F3	1	Safe Use and Care Manual	G363-M023-02
CF	1	Regulator	G537-0022-01	F4	1	Charcoal Grill Cooking Guide	G537-M021-02
CG	1	Charcoal Ignition Burner Valve	G537-0001-01	F5	1	Tank Screw	G362-0060-01
CH	1	Metal Hose	G508-0024-01	F6	2	Clump Weight	G553-0003-01
CI	4	Control Knob	G532-3600-01	F7	1	Tank exclusion wire	G532-0077-01
CJ	4	Control Knob Bezel	G363-0026-01				
CK1	1	Electronic Ignition Assembly	G532-0019-0A				
CK2	1	Ignition Battery Cover	G532-0019-02				
CL	1	Control Panel, Gas Side	G537-0023-01				
CM	1	Front Brace	G532-9000-01				

