



REVOLUTION™

2 BURNER



FLARE FREE
TECHNOLOGY™

ASSEMBLY MANUAL

G36323

LIMITED 5-YEAR WARRANTY



AGA 9138G


Read and save manual for future reference.

Assemble your grill immediately. Missing or damaged parts should be claimed within 30 days of purchase.

For product inquiries, parts, warranty and troubleshooting support, please call 1300 659 489.

www.colemanbbqs.com.au

Manual Revision #: 2023.07.18 MK

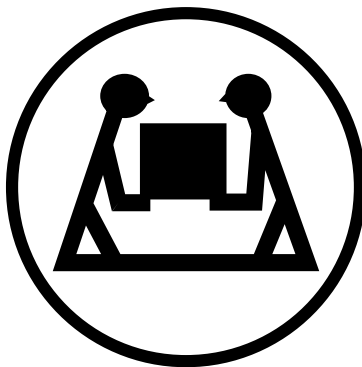

HEAVY ARTICLE NEEDS 2 TO LIFT

THIS MANUAL MUST REMAIN WITH THE PRODUCT AT ALL TIMES

To ORDER non-warranty replacement parts or accessories,
or to register your warranty, please visit us on the web at
www.colemanbbqs.com.au

! CAUTION

Sharp edges. Wear gloves when assembling your grill.

! CAUTION

It is recommended that you carefully read and adhere to all safety statements, assembly instructions, and care to directions prior to undertaking any assembly or cooking tasks.

! INSTALLER OR ASSEMBLER/ CONSUMER

This manual should be kept with the BBQ at all times.

! WARNING

Failure to follow all of the Manufacturer's instructions could result in hazardous fires, explosions, property damage, or serious personal injury or even death.

Follow all leak check procedures carefully prior to operation of barbecue, even if grill was dealer assembled. Do not try to light this barbecue without reading the Lighting Instructions section of this manual.

! DANGER

1. If you smell Gas:
 - a. Shut off gas to the appliance
 - b. Extinguish any open flame
 - c. Open lid
 - d. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department
2. Requires two people to complete the assembly process.
3. Beware of sharp edges.

! WARNING

1. Do not store or use gasoline, vapours, or any other flammable liquids in the vicinity of this appliance.
2. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

! WARNING

WHEN EXPOSED TO DIRECT SUNLIGHT AND DURING OPERATION, THE STAINLESS STEEL AND PAINTED STEEL COMPONENTS OF YOUR BARBECUE CAN REACH HIGH TEMPERATURES.

THIS BARBECUE IS FOR OUTDOOR USE ONLY

**CONTACT CALL CENTRE IF ANY PARTS ARE MISSING
1300 659 489**





HARDWARE PACK

TOOLS NEEDED FOR ASSEMBLY

- #2 Phillips screwdriver (long and short)
- 1/4" Slotted screwdriver (long and short)
- Adjustable wrench
- Pliers

| No. | Description | Part Number | Qty. |
|-----|----------------------------------|------------------|------|
| 1 | 1/4"-20UNCx50 Screw | 20120-13050-250 | 2 |
| 2 | 1/4"-20UNCx38 Screw | 20120-13038-250 | 6 |
| 3 | 1/4"-20UNCx16 Screw | 20120-13016-250 | 34 |
| 4 | 1/4"-20UNC Screw | G353-0014-9000 | 4 |
| 5 | NO.10-24UNC x13 Screw | 20124-10013-250 | 15 |
| 6 | ST4.8X10 Tapping Screw | 22500-48010-810 | 2 |
| 7 | NO.8-32 X 3/8, Philips Flat Head | 20332-08010-250 | 3 |
| 8 | ST4.2X10 Tapping Screw | 22500-42010-137B | 14 |
| 9 | Rubberized Washer | G501-0054-9100 | 10 |
| 10 | 1/4"-20UNC Flange Nut | 31220-13000-250 | 4 |
| 11 | NO.10-24UNC Flange Nut | 31224-10000-250 | 1 |
| 12 | Wheel Lock Pin | G350-0026-9000 | 1 |

Caution:
Sheet metal can cause injury. Wear gloves when installing the grill.

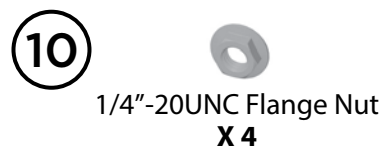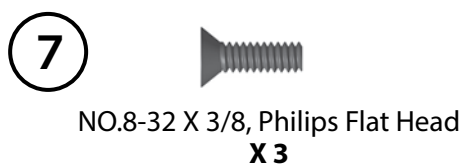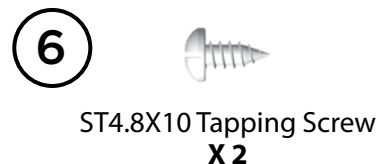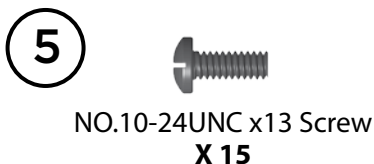

BEFORE ASSEMBLING THIS BARBECUE, READ THE INSTRUCTIONS CAREFULLY.


Assemble the barbecue on a flat, clean surface. Grill is heavy. Two people are recommended to assemble this barbecue.

PARTS LIST G36323

| Item No. | Qty. | Description | Part No. |
|----------|------|------------------------------|--------------|
| AA | 1 | Top Lid Assembly | G363-6200-01 |
| AA1 | 1 | Top lid Left side panel | G532-0002-01 |
| AA2 | 1 | Top lid Right side panel | G532-0003-01 |
| AB | 1 | Lid Handle | G363-0005-0A |
| AC | 1 | Thermometer | G363-0035-01 |
| AD | 1 | Thermometer Bezel | G532-0006-01 |
| AE | 2 | Screw, Top Lid | G466-0007-01 |
| AF | 2 | Lid Bumper, Front | G527-0002-02 |
| AG | 2 | Lid Bumper, Rear | G303-0038-01 |
| BA | 1 | Burner Box Assembly | G363-3100-01 |
| BB | 2 | Main Burner | G532-K200-01 |
| BC | 1 | Carryover Assembly | G354-0024-01 |
| BD | 2 | Heat Distribution Plate | G532-0016-01 |
| BE | 1 | Grease Channel | G363-0012-01 |
| BF | 2 | Cooking Grate | G532-0017-02 |
| BG | 1 | Cleaning Tool | G532-0049-01 |
| BH | 1 | Warming Rack | G363-0013-01 |
| BI | 1 | Match Holder | G501-0068-01 |
| BJ | 1 | Grease Channel Shield | G532-0063-01 |
| BK | 2 | Main Burner Brace | G466-0047-01 |
| BL | 1 | Hotplate | G532-0088-01 |
| CA | 1 | Manifold Assembly | G363-6500-01 |
| CB | 1 | Regulator | G363-0033-01 |
| CC | 1 | Electrode Set, Main Burner | G515-0067-01 |
| CD | 2 | Control Knob | G532-3600-01 |
| CE1 | 1 | Electronic Ignition Assembly | G532-0019-0A |
| CE2 | 1 | Ignition Battery Cover | G532-0019-02 |
| CE3 | 1 | Instastart™ Ignition Button | G532-0082-01 |
| CE4 | 1 | Ground Wire | G602-0024-03 |
| CF | 2 | Knob Bezel | G363-0026-01 |
| CG | 1 | Control Panel | G363-0034-01 |
| CH | 1 | Door Support Rail | G363-5400-01 |
| CI | 1 | Grease Cup, Burner Box | G416-0015-01 |
| CJ | 2 | Grease Cup Rails | G466-0034-01 |
| CK | 1 | Upper Back Panel | G363-0037-01 |
| CL | 1 | Heat Shield | G363-0016-01 |

| Item No. | Qty. | Description | Part No. |
|----------|------|------------------------------------|--------------|
| DA | 2 | Side Shelf Table | G363-7200-01 |
| DB | 1 | Side Shelf Fascia, Left | G363-7300-01 |
| DC | 1 | Side Shelf Table Rear Brace, Left | G363-1000-02 |
| DD | 1 | Side Shelf Fascia, Right | G363-7500-01 |
| DE | 1 | Side Shelf Table Rear Brace, Right | G537-1100-01 |
| DF | 2 | Support bracket A, side shelf | G363-1300-01 |
| DG | 2 | Support bracket B, side shelf | G363-1400-01 |
| DH | 2 | Side Shelf Extension Table | G537-1200-01 |
| DI | 1 | Grease Cup Holder, Flare-Free | G532-0031-02 |
| DJ | 1 | Grease Cup, Flare-Free | G532-0031-02 |
| EA | 1 | Cart Side Panel, Left | G363-6800-01 |
| EB | 1 | Cart Side Panel, Right | G363-6900-01 |
| EC | 1 | Door Assembly | G363-5800-01 |
| ED | 1 | Door Handle | G363-0019-02 |
| EE | 1 | Bottom Shelf | G363-6600-01 |
| EF | 2 | Locking Castor | G350-0023-01 |
| EG | 2 | Castor | G350-0024-01 |
| EH | 1 | Door Magnet Assembly | G527-0037-01 |
| EI | 1 | Left Heat Shield | G363-0038-01 |
| EJ | 1 | Right Heat Shield | G363-0039-01 |
| EK | 1 | Ignition Box Cover | G363-0040-01 |
| F1 | 1 | Hardware Pack | G363-B023-01 |
| F2 | 1 | Assembly Manual | G363-M023-01 |
| F3 | 1 | Safe Use and Care Manual | G363-M023-02 |
| F4 | 2 | Gas Bottle Support | G362-0060-01 |
| F5 | 1 | Clump Weight | G651-0012-01 |

EXPLODED DIAGRAM FOR G36323

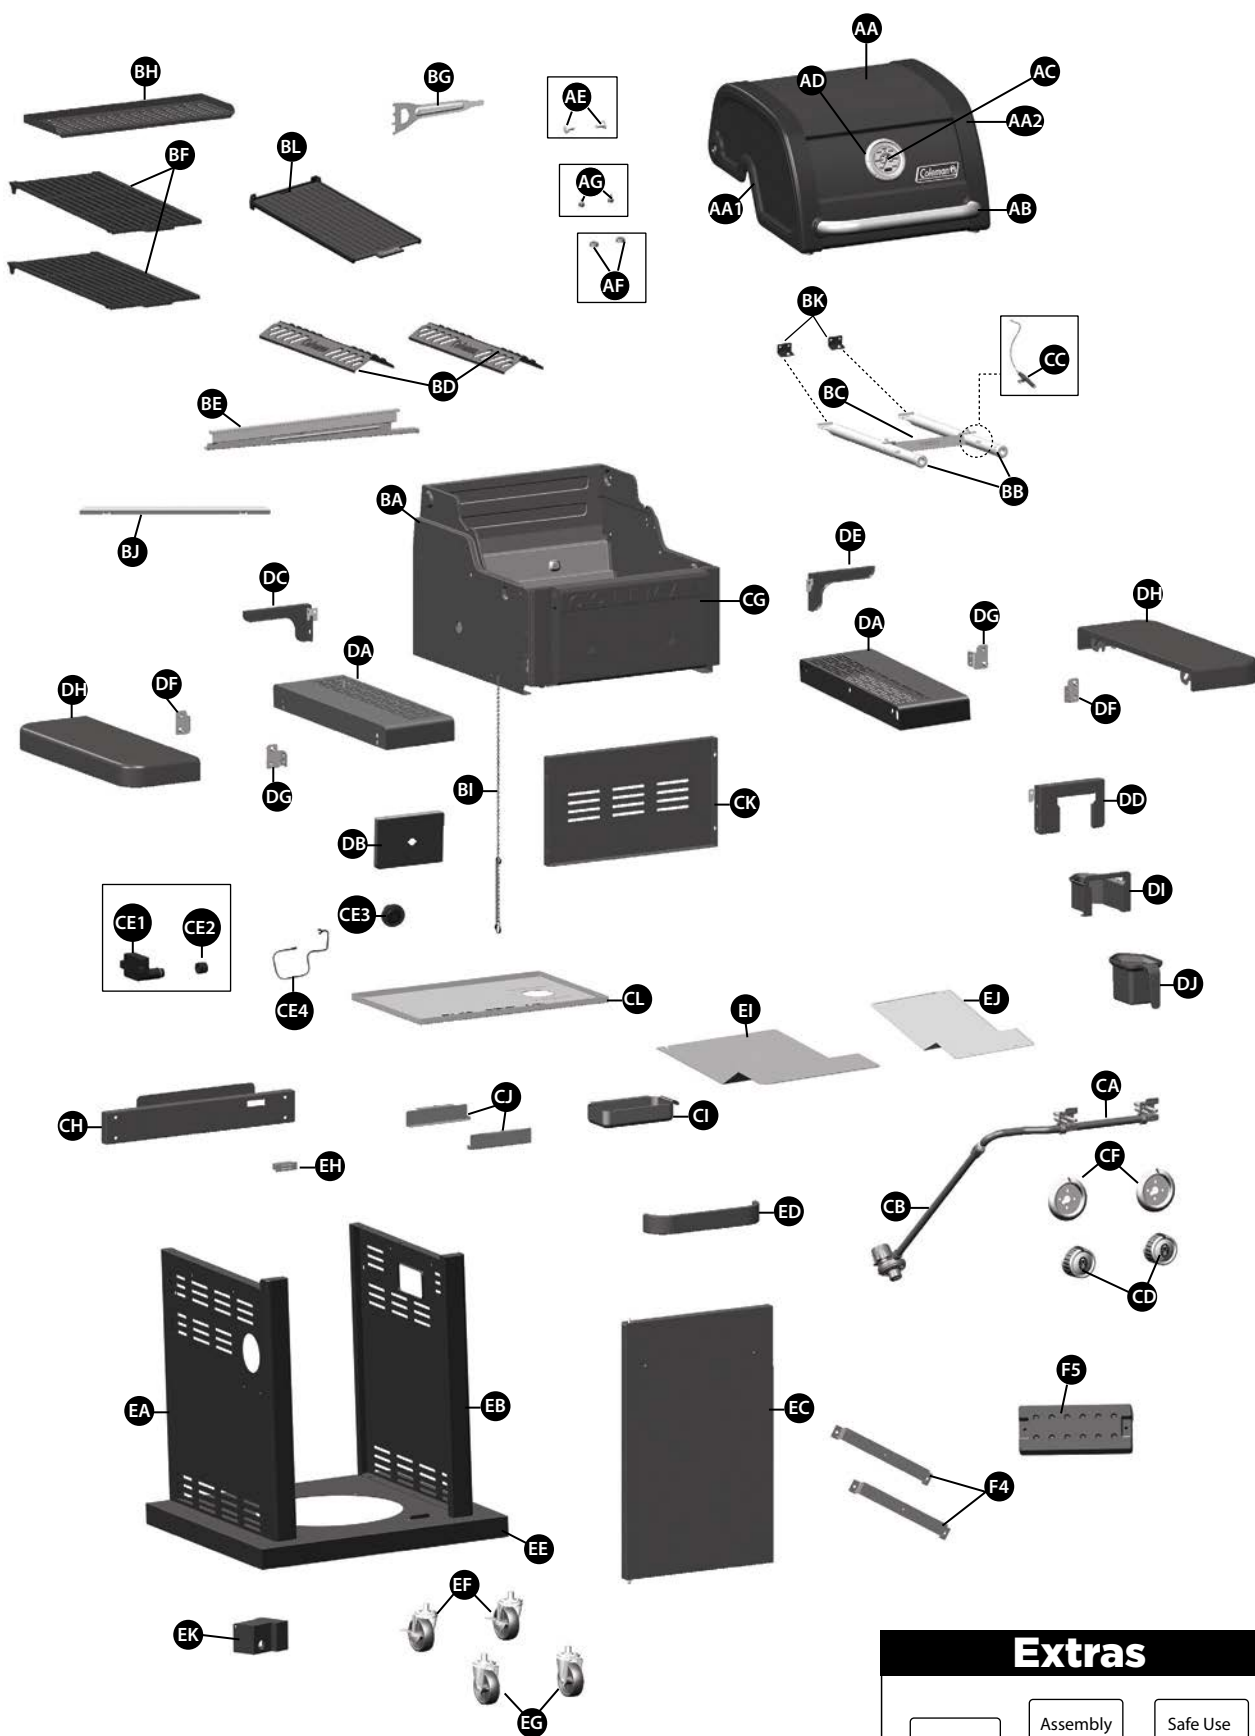

Extras

Hardware
Pack
F1

Assembly
Manual
F2

Safe Use
& Care
Manual
F3

ASSEMBLY INSTRUCTIONS

1


12



X 1



TIP:

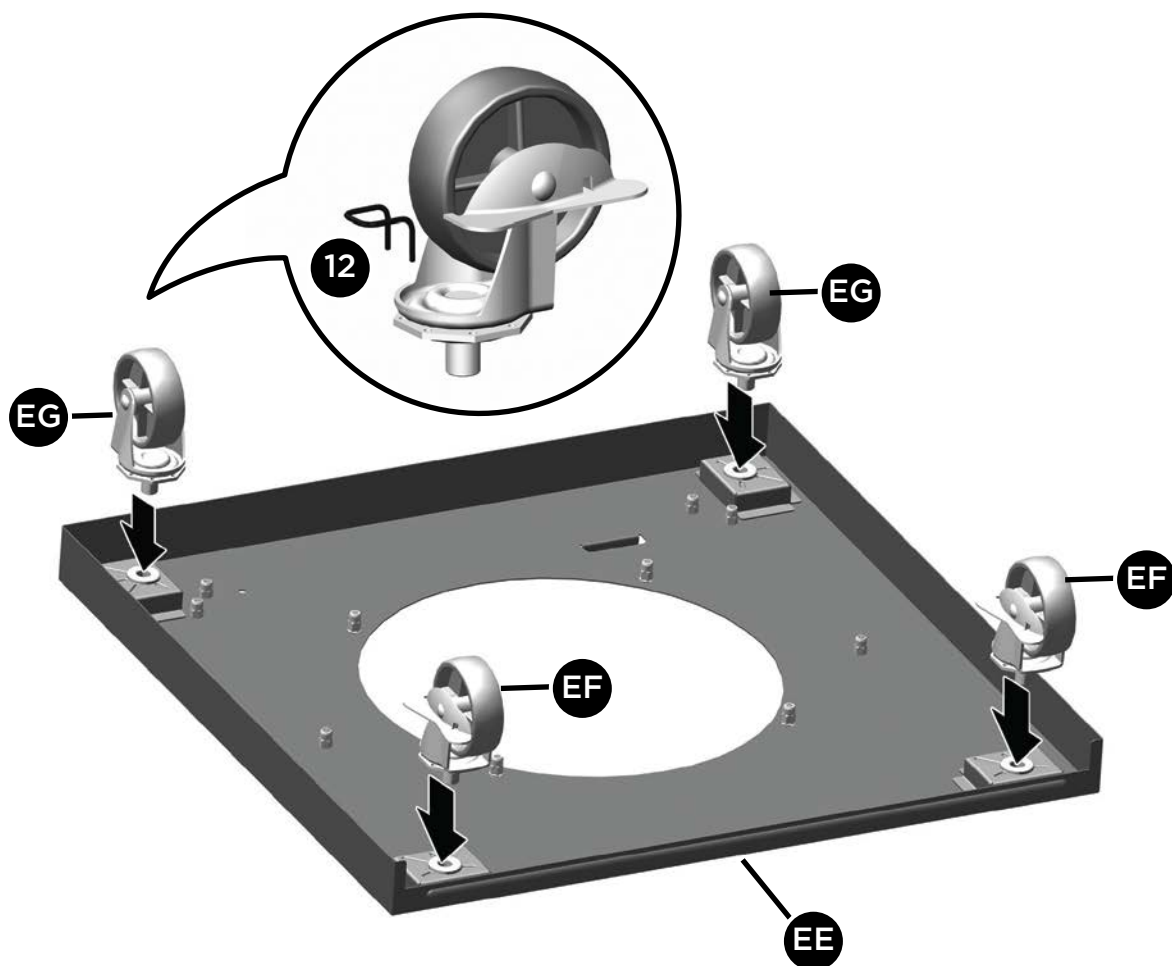
One time assembly tool.




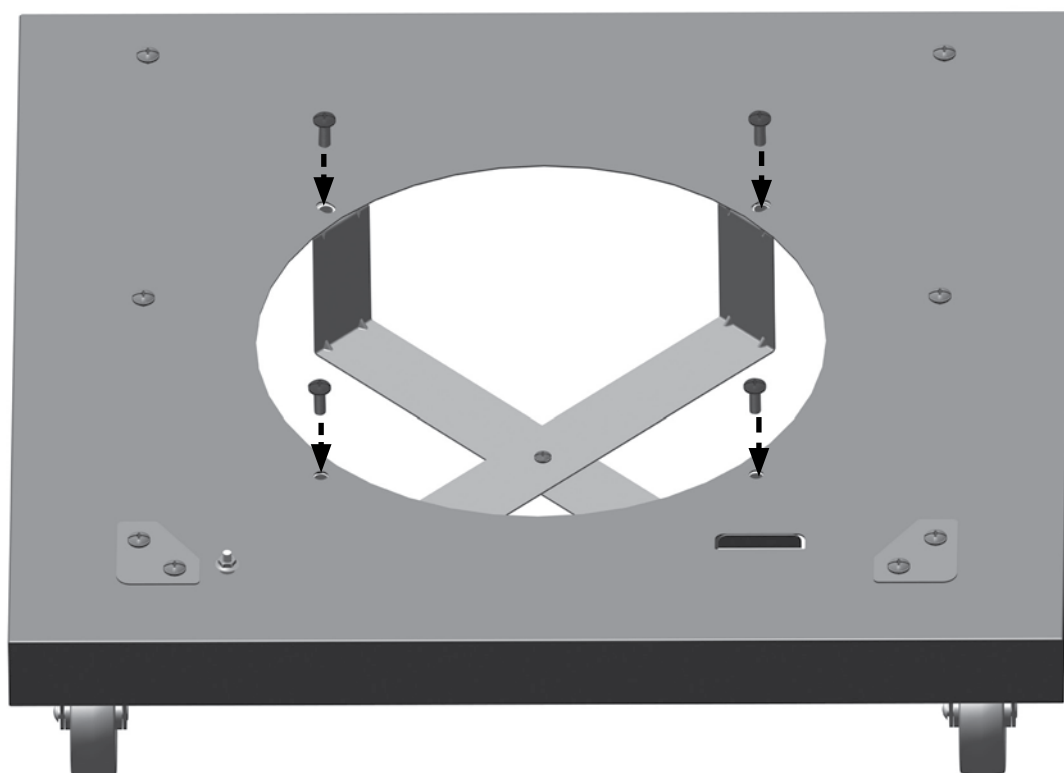
ASSEMBLY INSTRUCTIONS

2

| | |
|---|---|
| 5 | 11 |
|  |  |
| X 1 | X 1 |



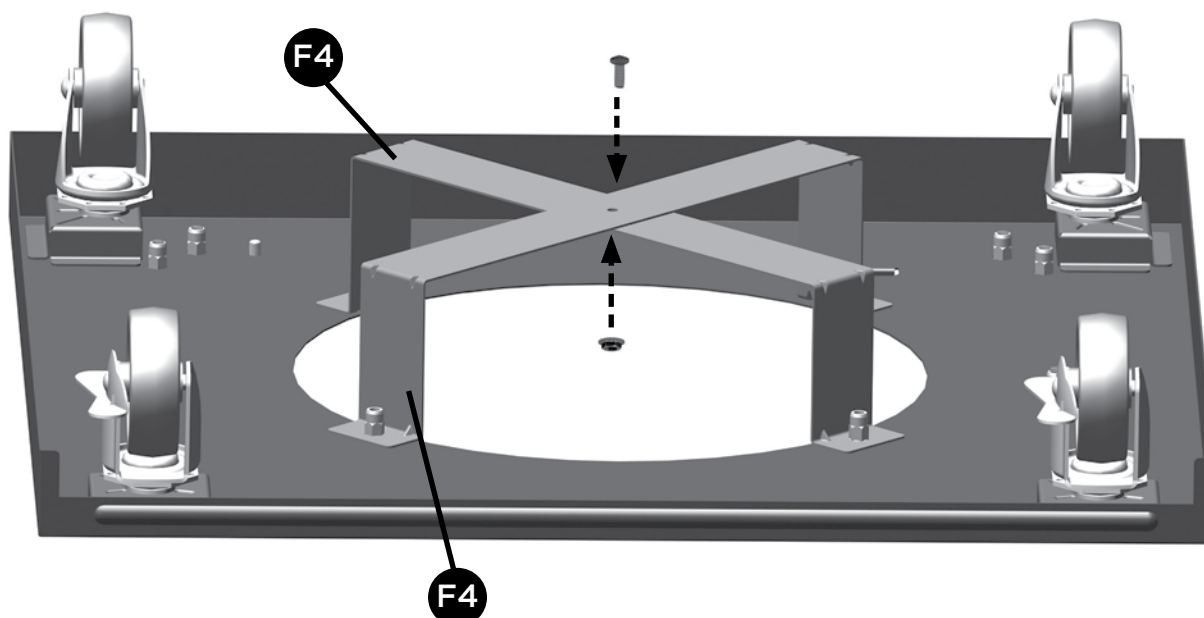


| |
|---|
| 3 |
|  |
| X 4 |




ASSEMBLY INSTRUCTIONS

3

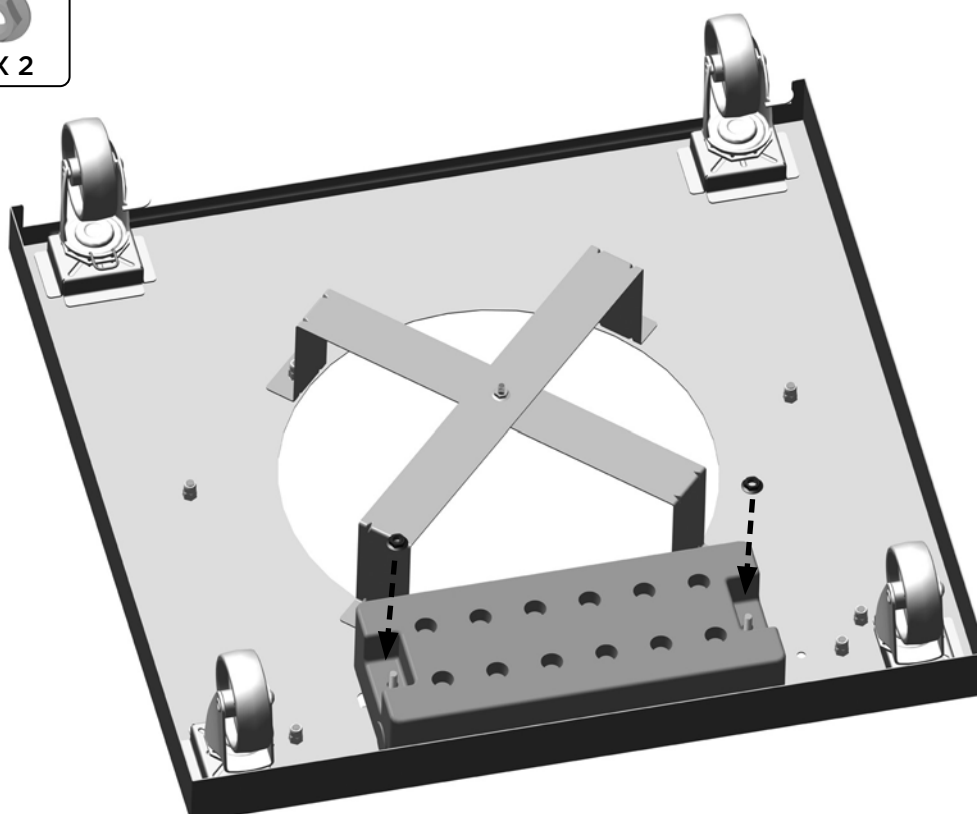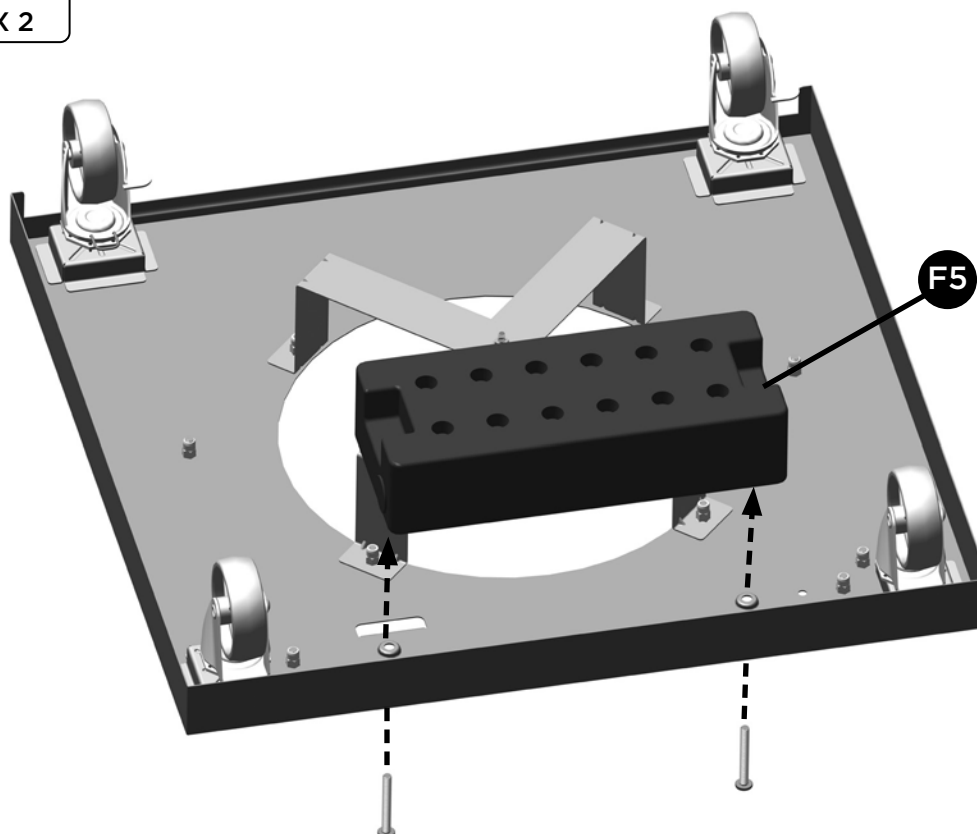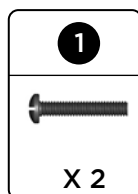

ASSEMBLY INSTRUCTIONS

4

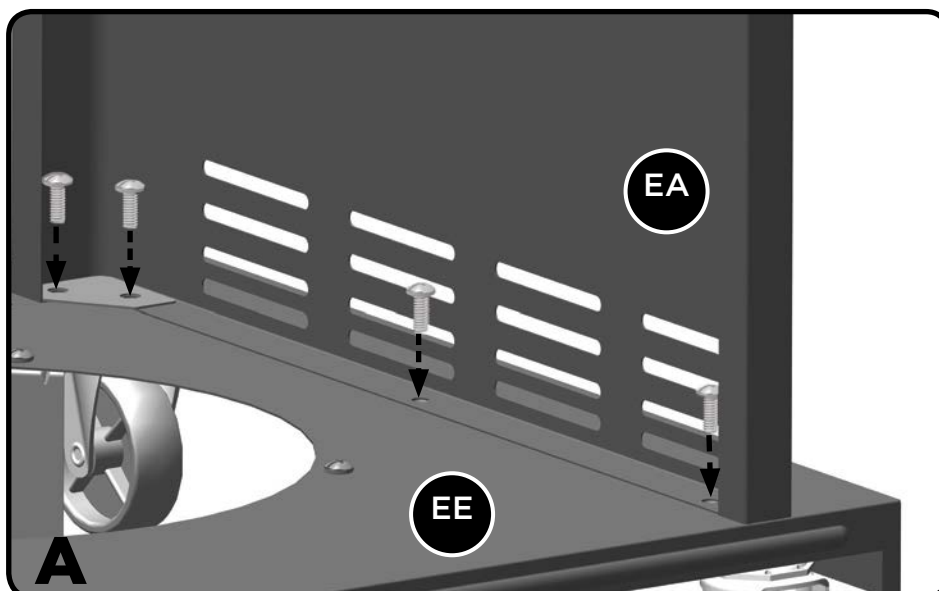


3



X 4

TIP:

Count all 4 screws as shown.

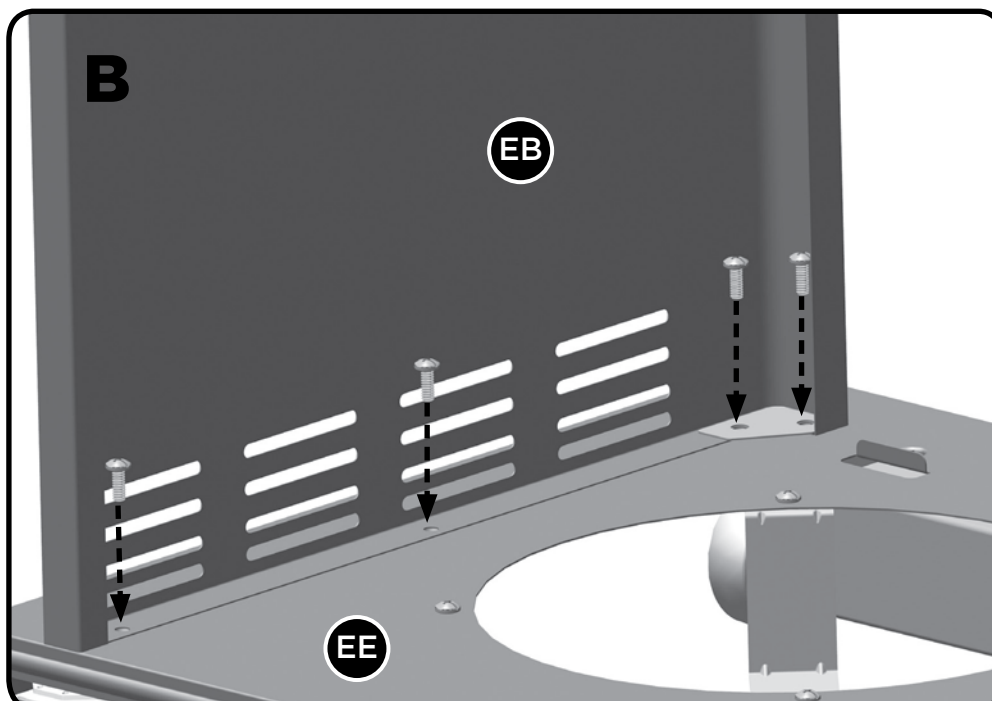

3



X 4

TIP:


Count all 4 screws as shown.

ASSEMBLY INSTRUCTIONS

5


TIP:

Ensure correct assembly position as shown below.

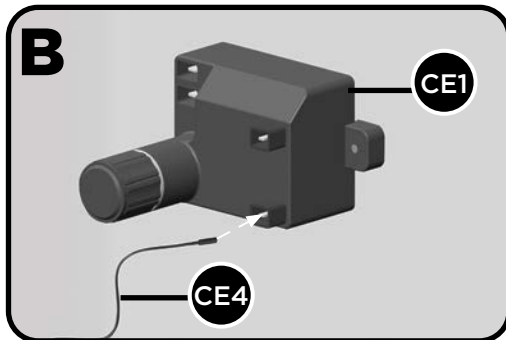

TIP:

Attach Ground Wire CE4 to EA wall behind the Electronic Ignition Assembly CE1.

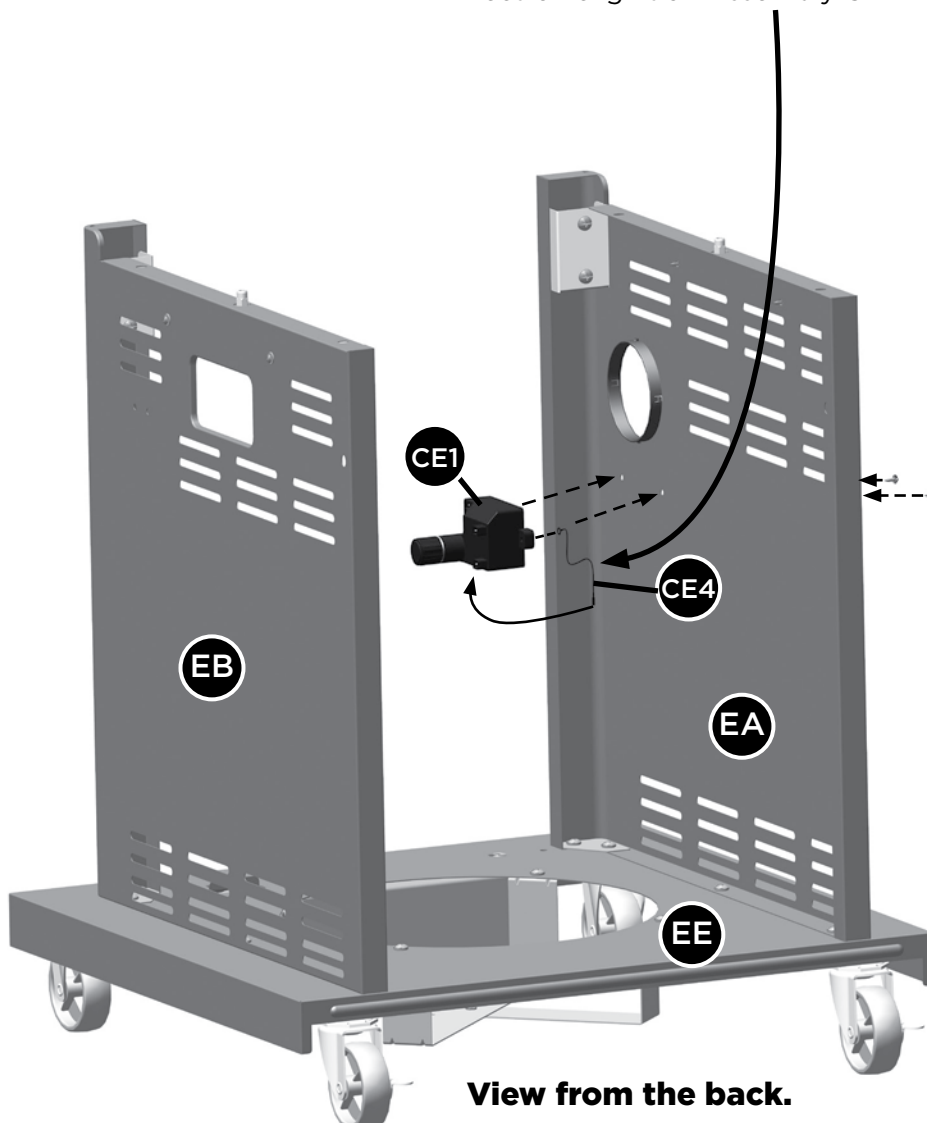

6




X 2

View from the back.

ASSEMBLY INSTRUCTIONS


6

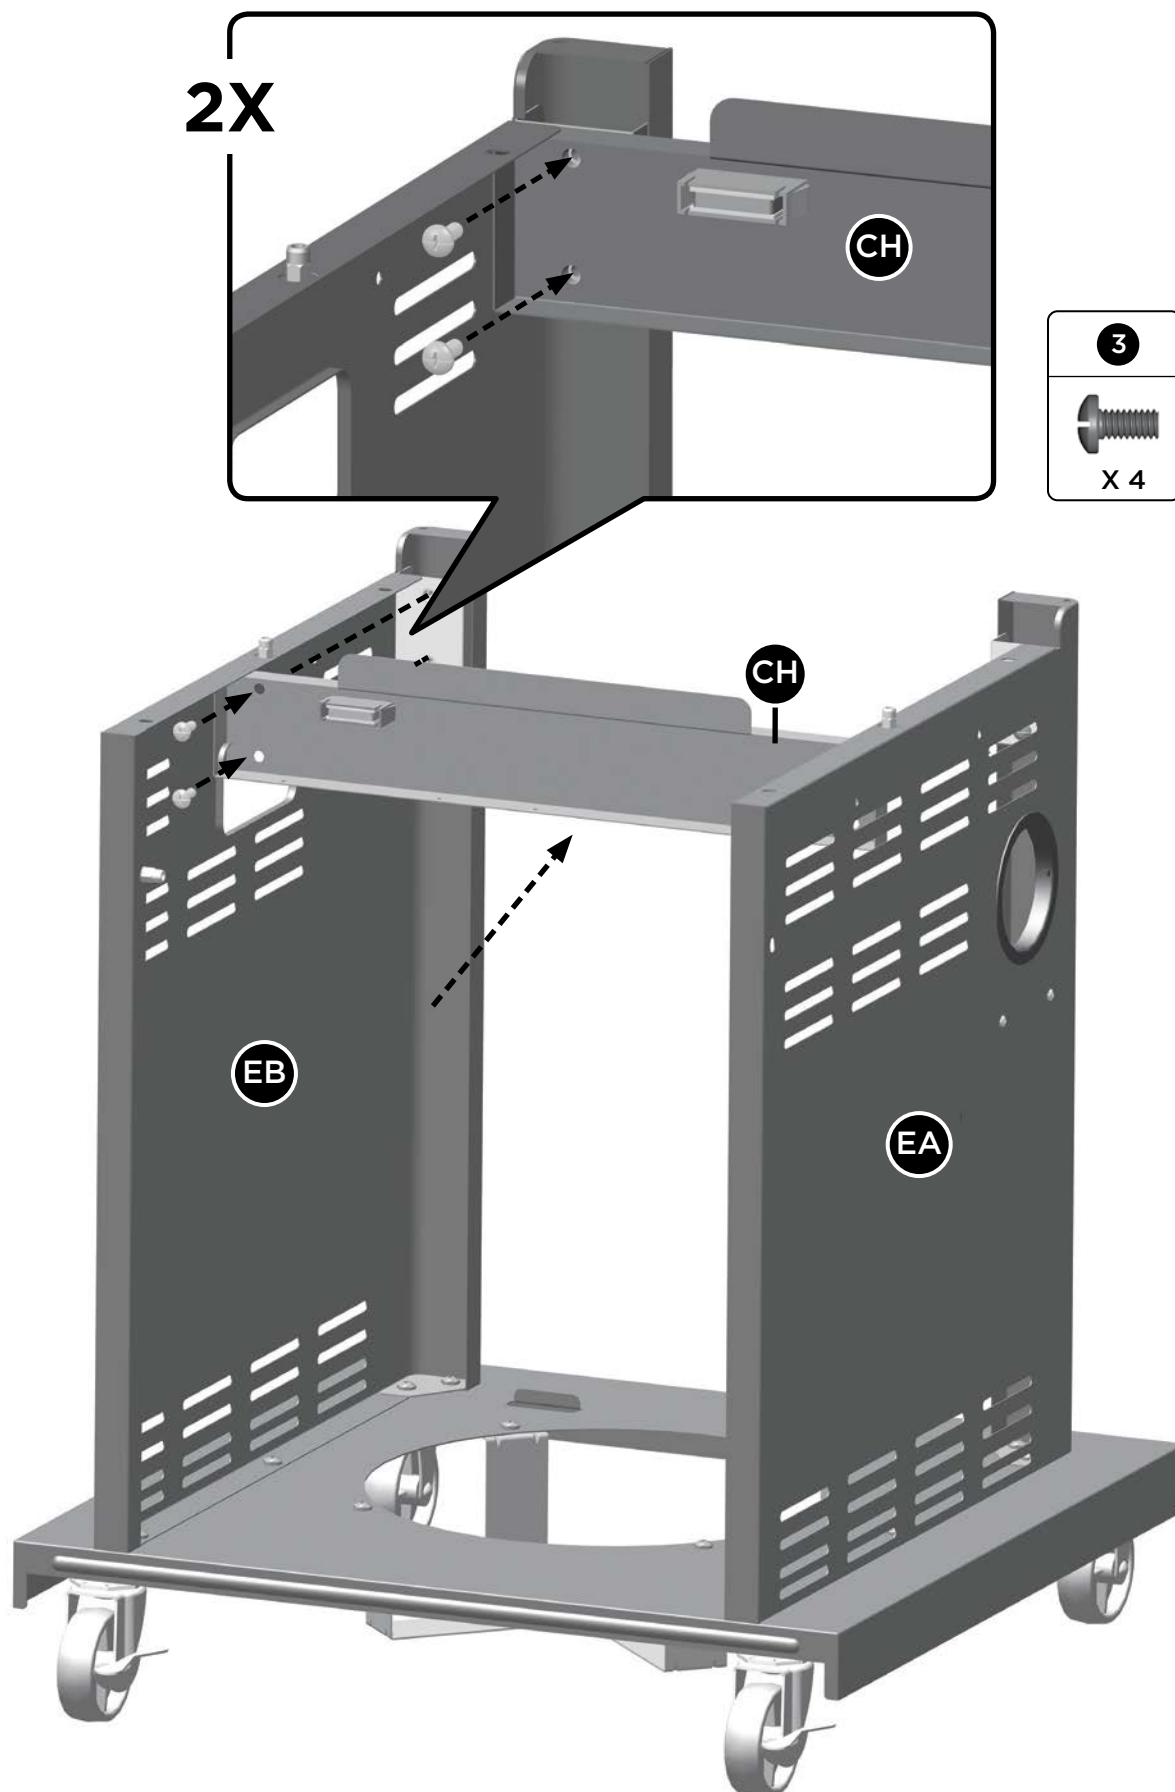


ASSEMBLY INSTRUCTIONS

7

A.

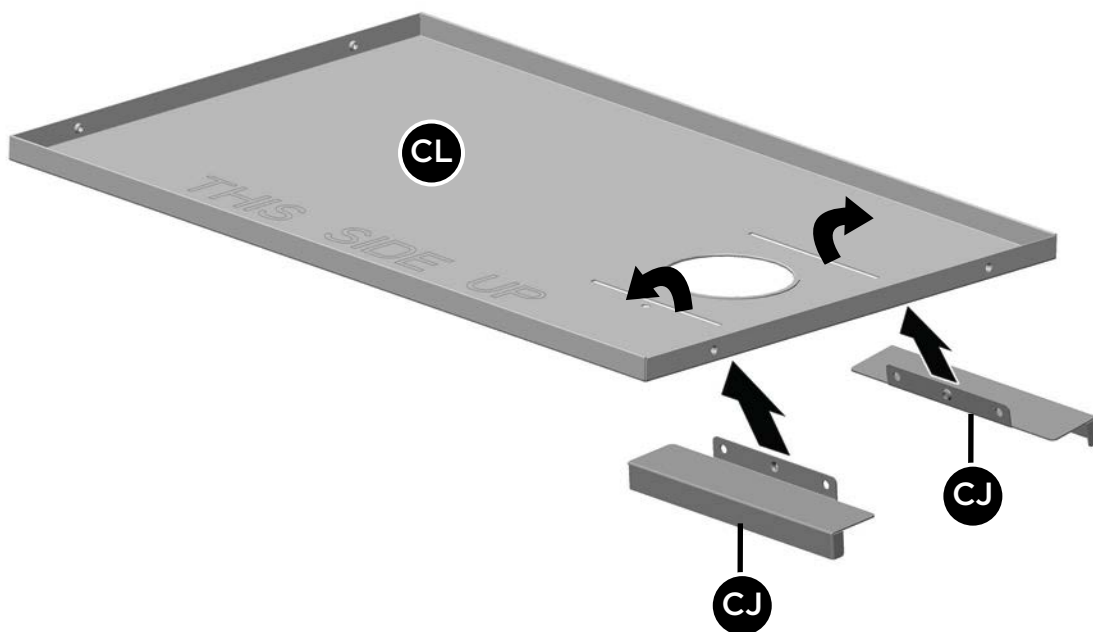

B.

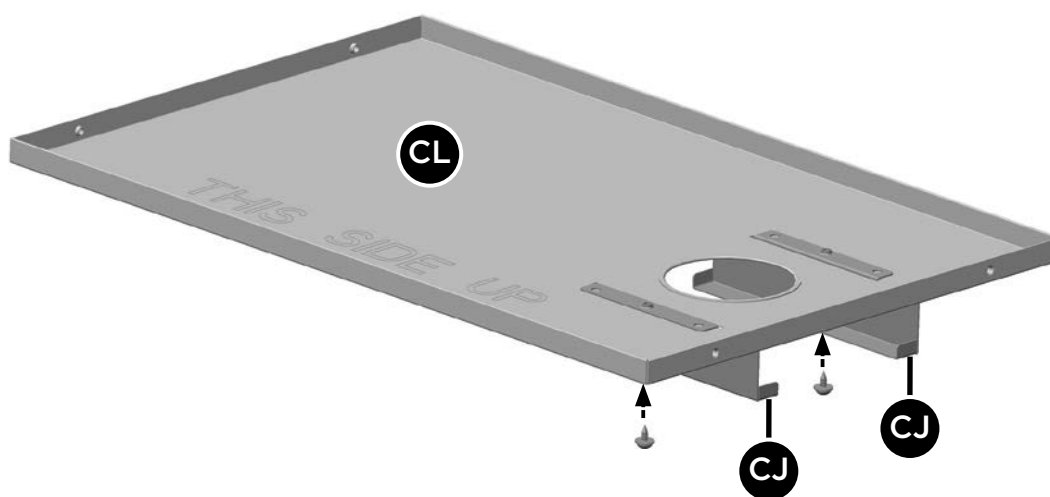

8




X 2

ASSEMBLY INSTRUCTIONS

8

C.

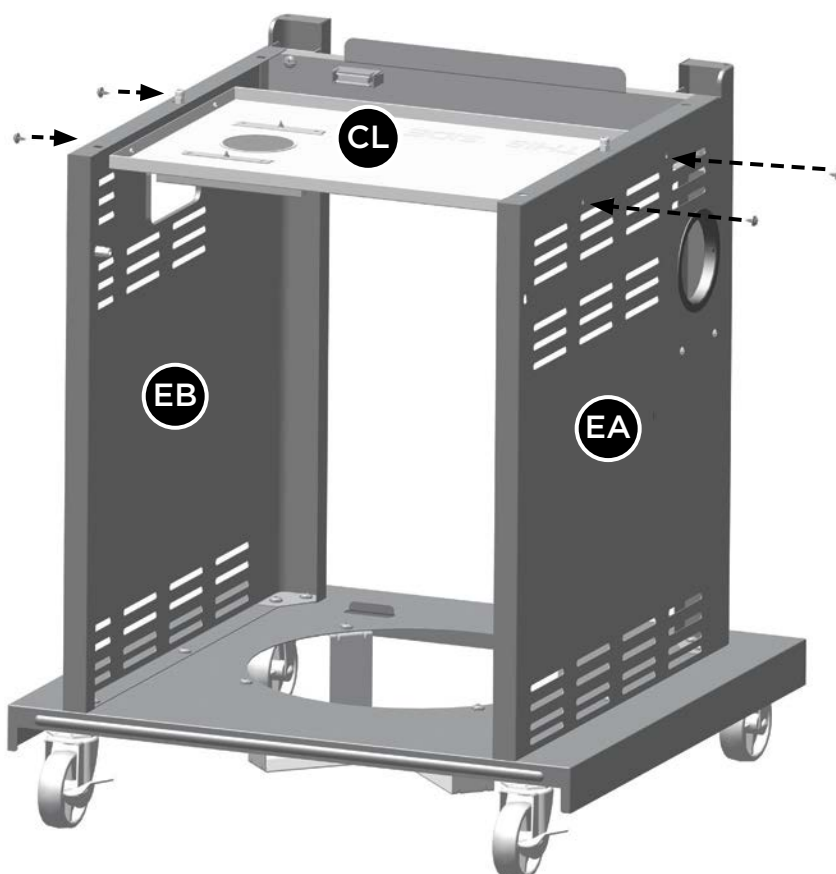


8




X 4

D.

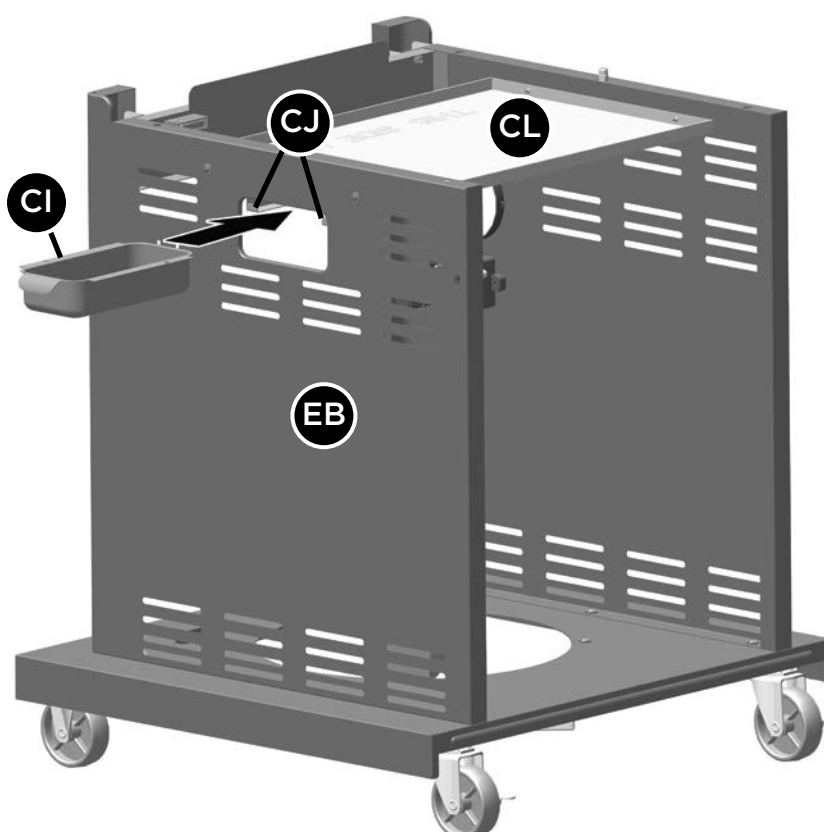

ASSEMBLY INSTRUCTIONS

9

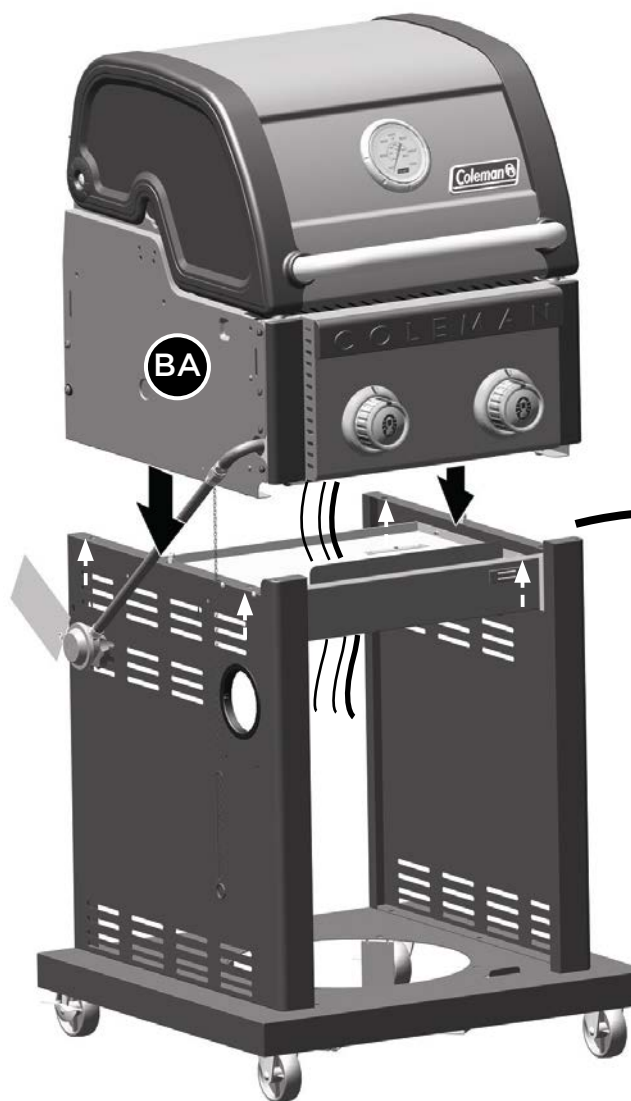


**⚠ WARNING:
WATCH YOUR HANDS!**


3



X 4

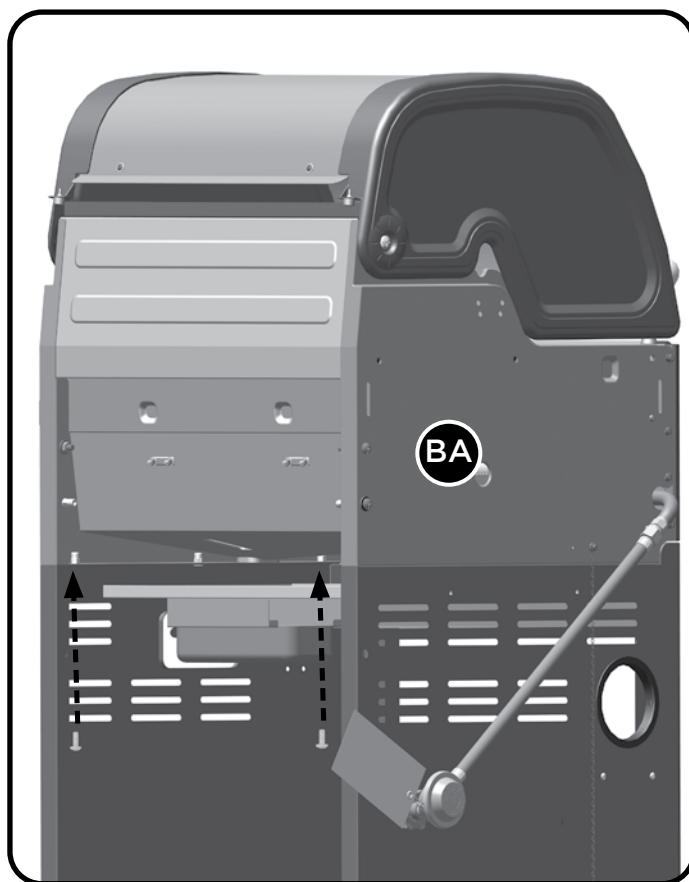


10

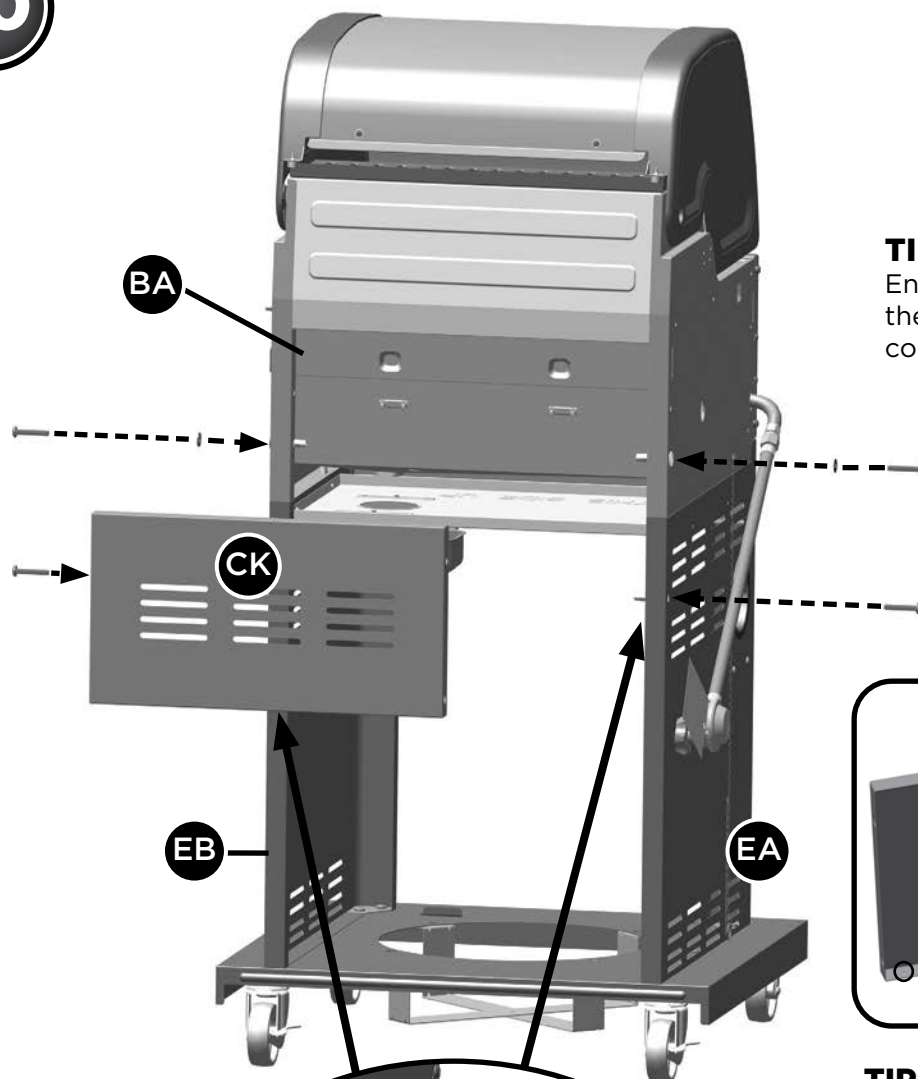


TIP:

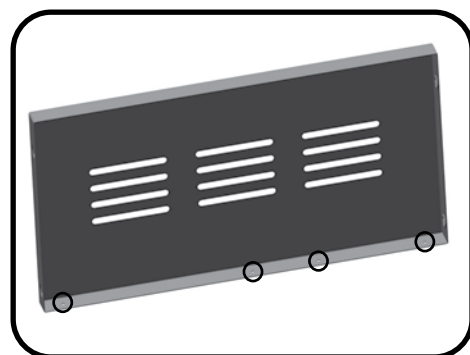

Ensure that the rubber side of the rubberized washer makes contact with the burner box.



TIP:

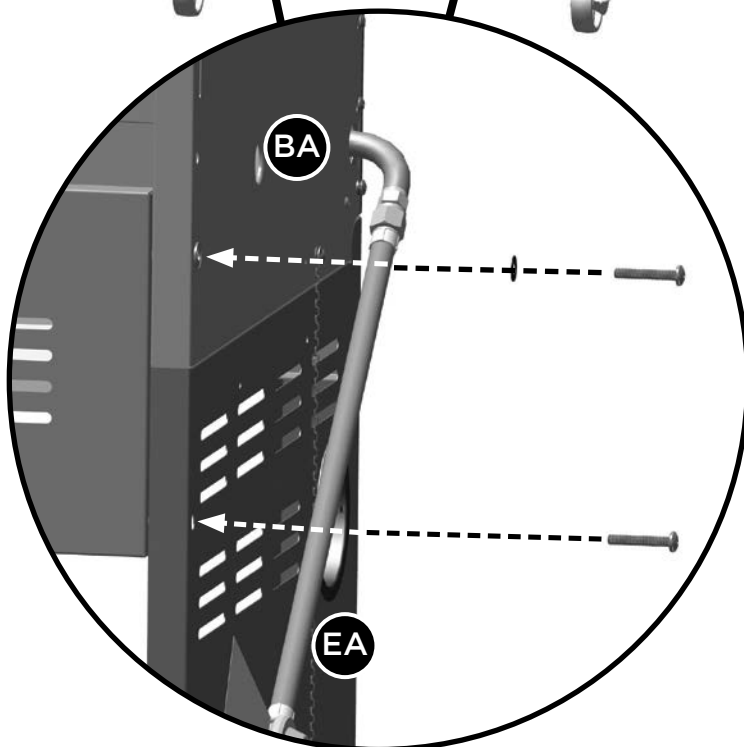
Ensure holes on the bottom.




| | |
|---|---|
| 2 | 9 |
|  |  |
| X 4 | X 2 |

11

A.

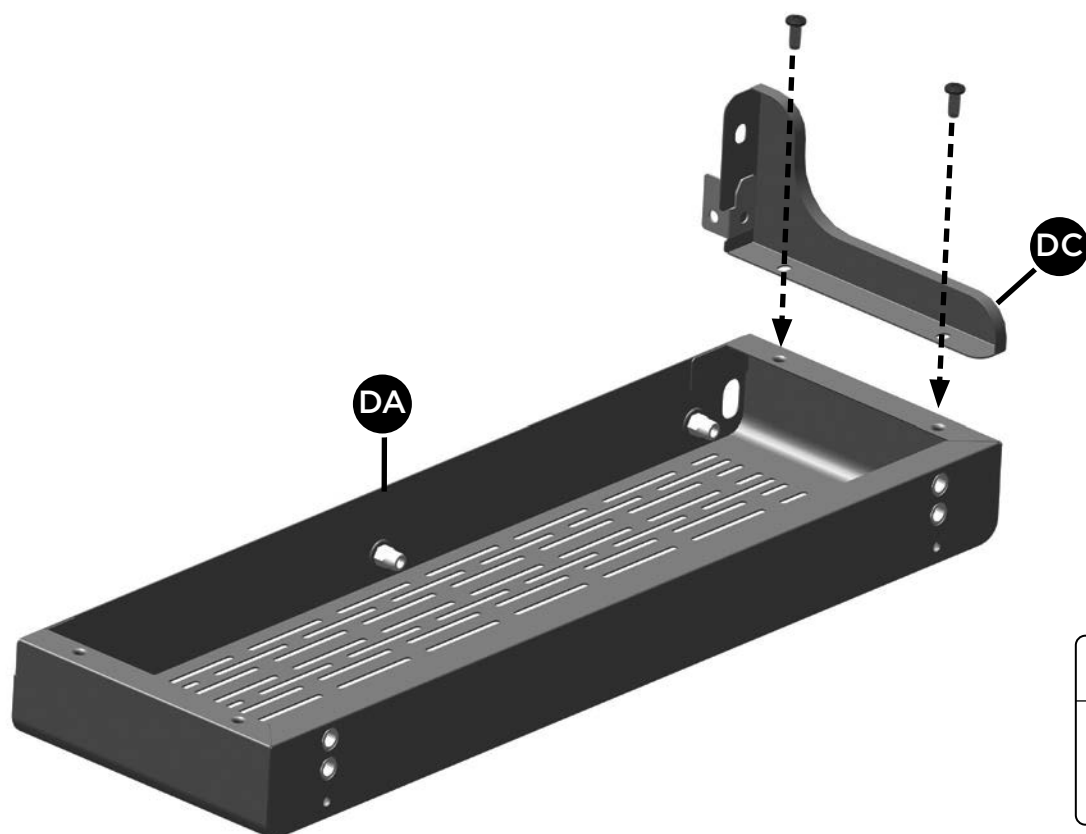

B.

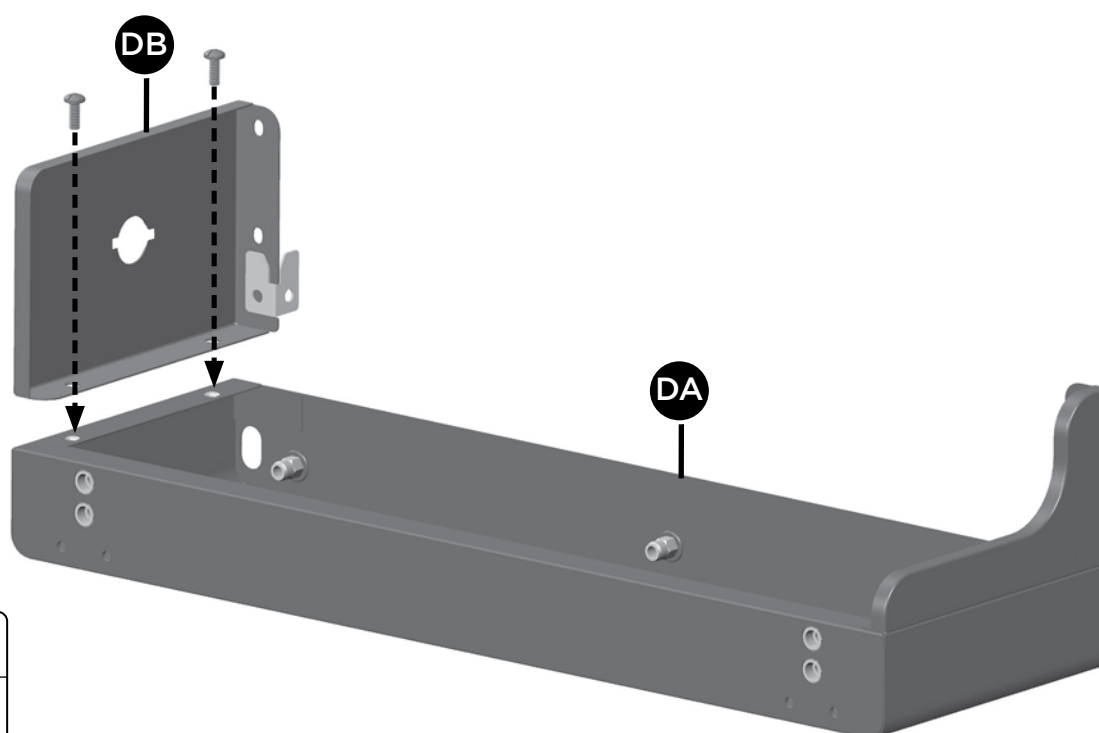


12

A.



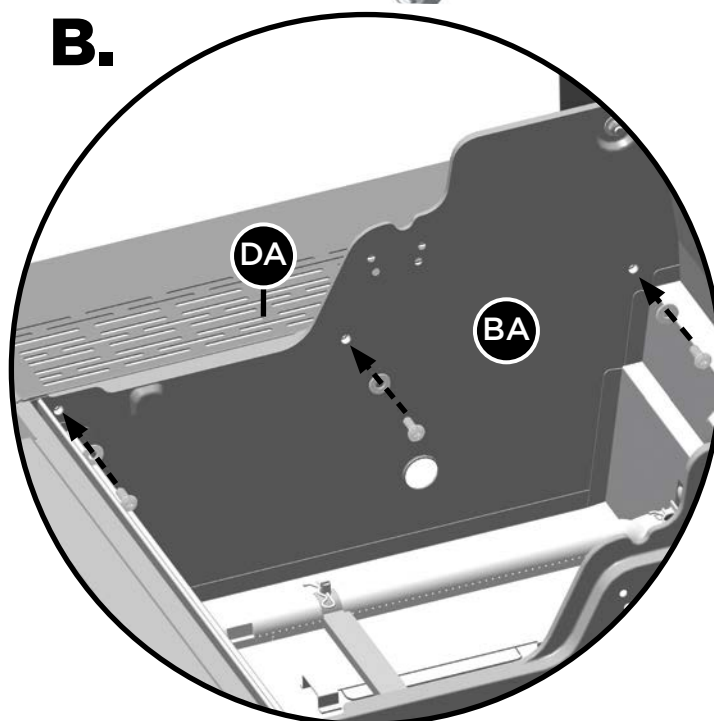

B.




TIP:

- 1.Ensure that the rubber side of the rubberized washer makes contact with the burner box.
- 2.Only tighten screw halfway.


| | |
|---|---|
| 3 | 9 |
|  |  |
| X 3 | X 3 |

13

C.

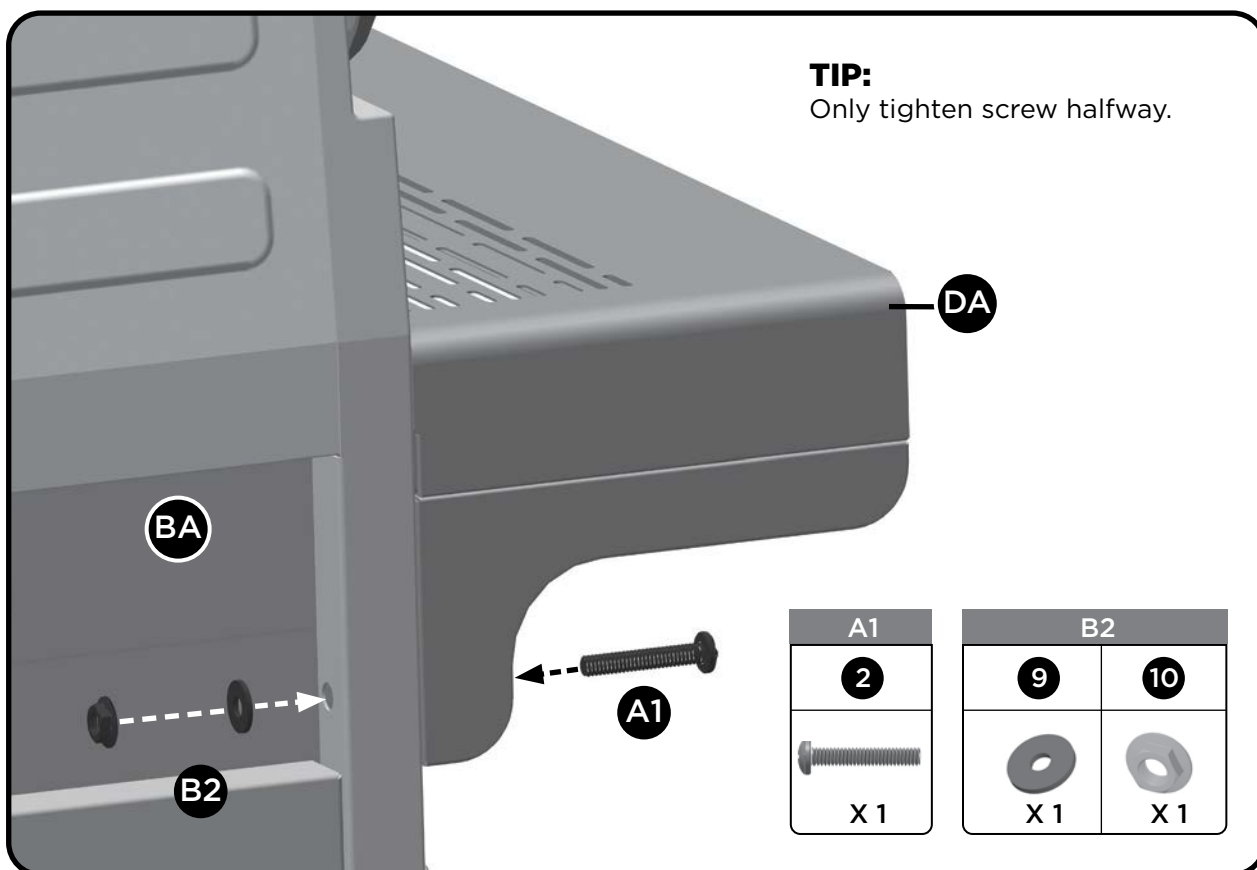


D.

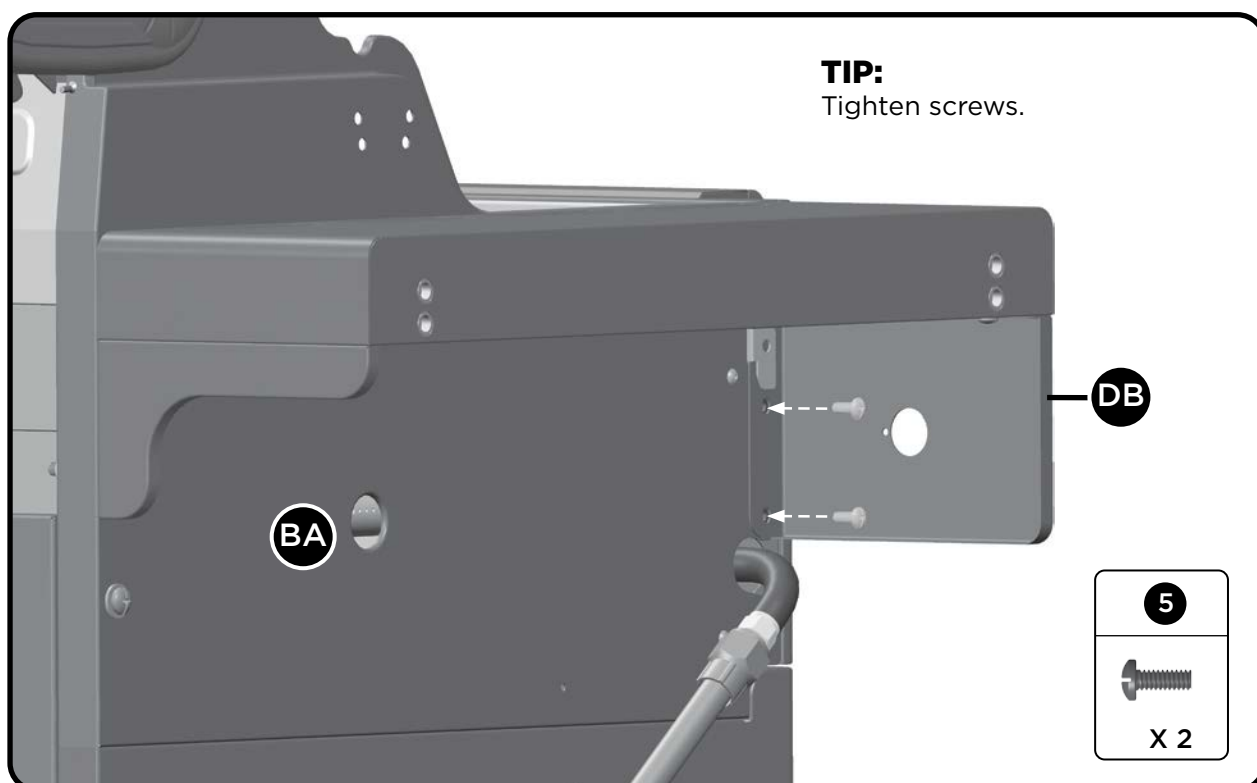


14

TIP:
Tighten screws.

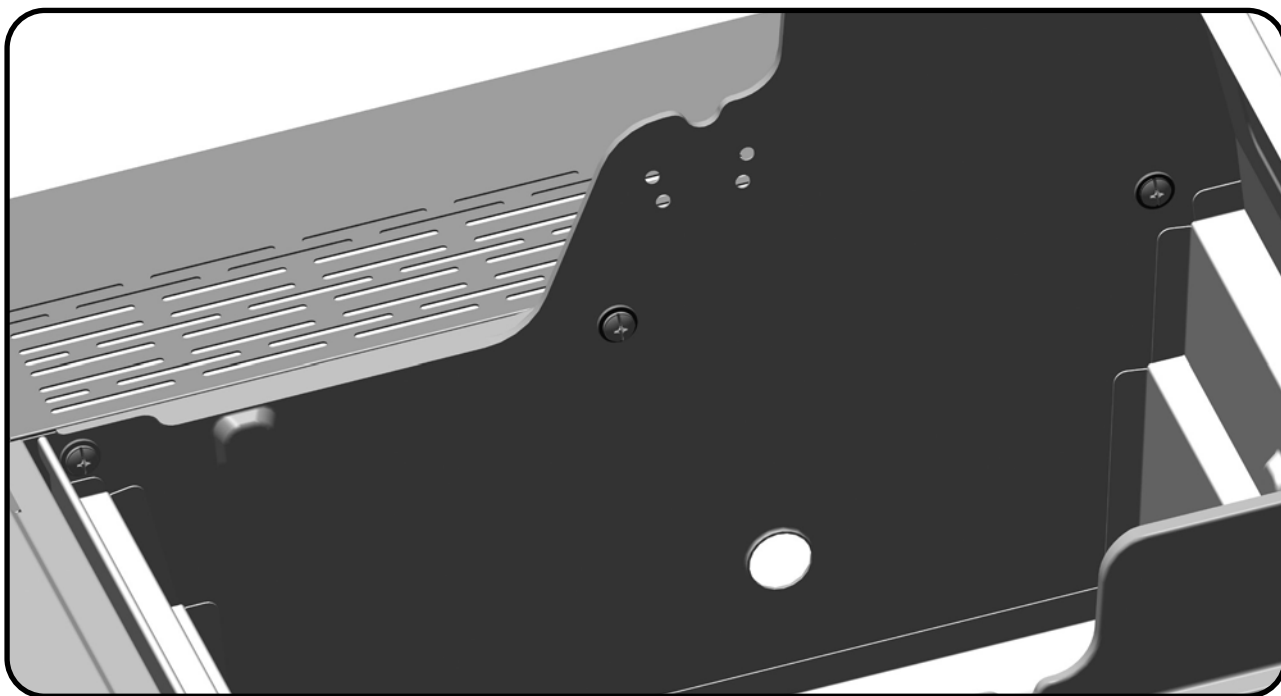




TIP:
Tighten screws.

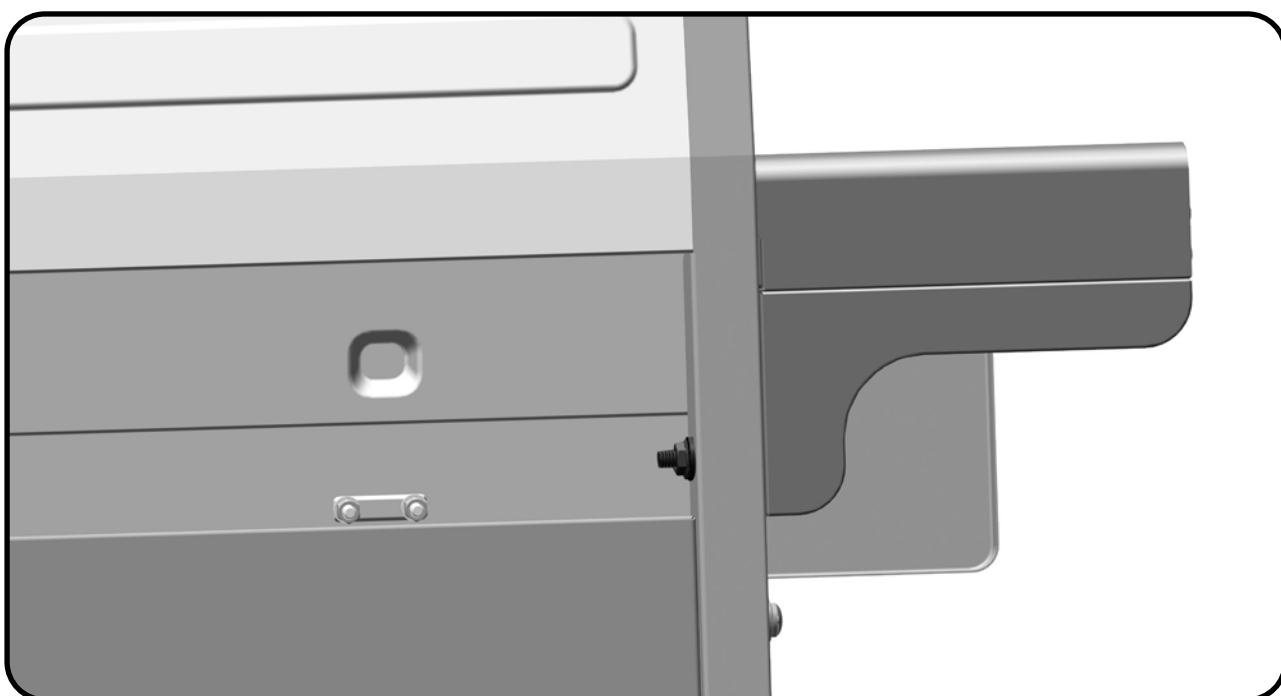

15

E.

Front view

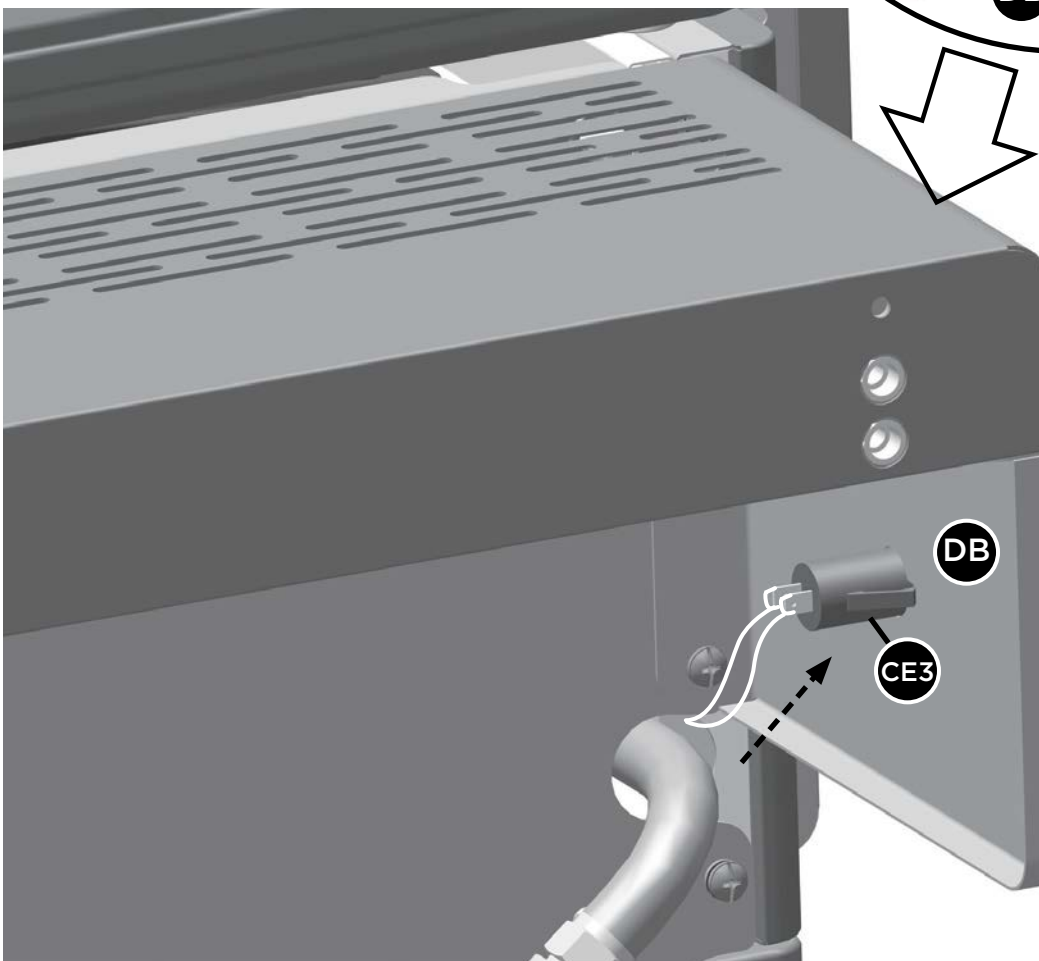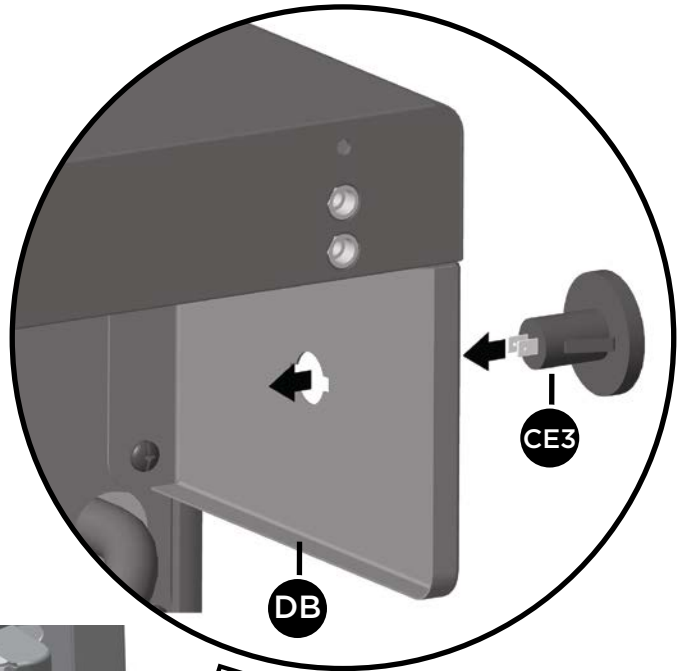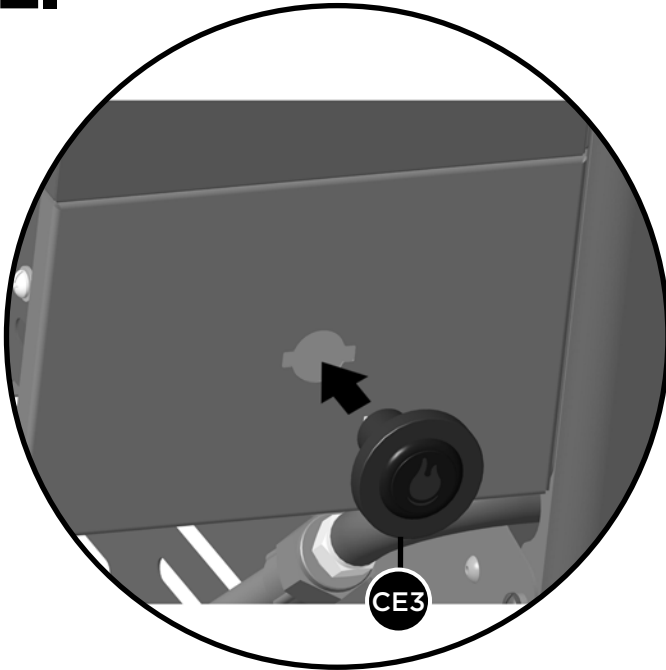




TIP:
Ensure wire are fully
connected.

16

Electronic Ignition Wire Assembly


Locate the two instastart ignition wires(CE3) under the control panel (CG), attached to the manifold (CA). Connect wires to the Electronic ignition box, labelled CE3 in the diagram below. After, connect the main burner electrode wire to the Electronic ignition box, labelled CC in the diagram below. Ensure that the ground wire (CE4) assembled in STEP 2 is firmly in place. Lastly, Insert one "AA" battery into the compartment with the positive end facing outward. Secure using the battery cover (CE2).

(CE3)
InstaStart
Button

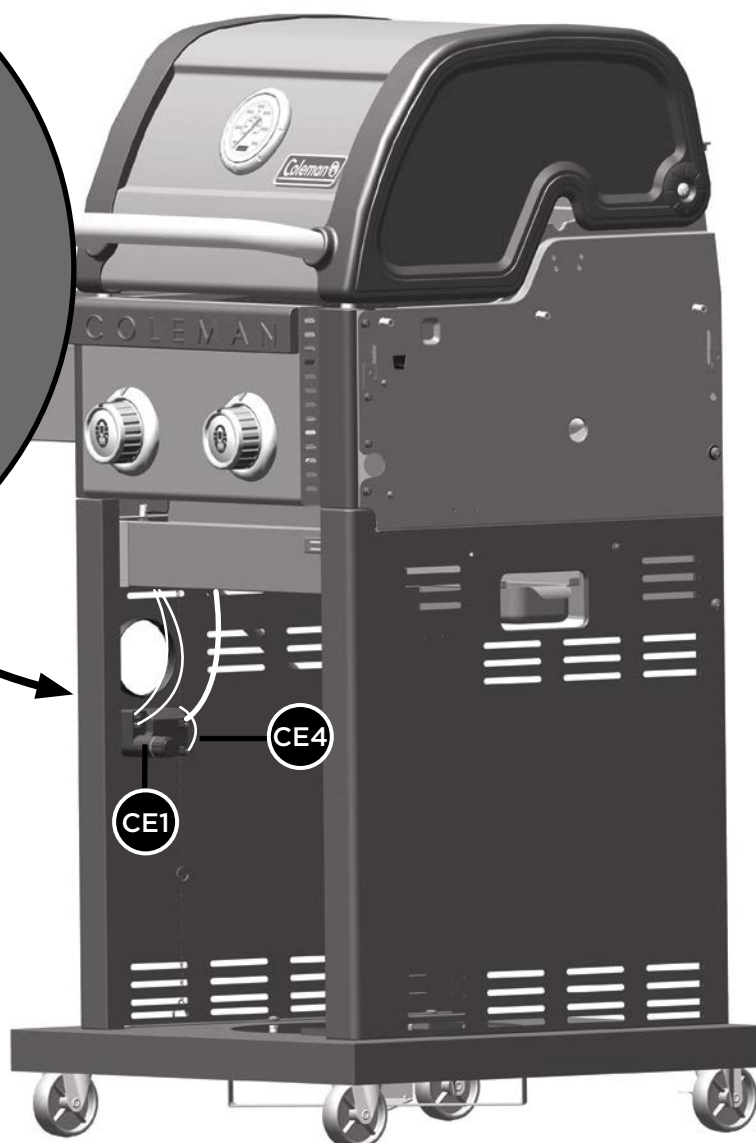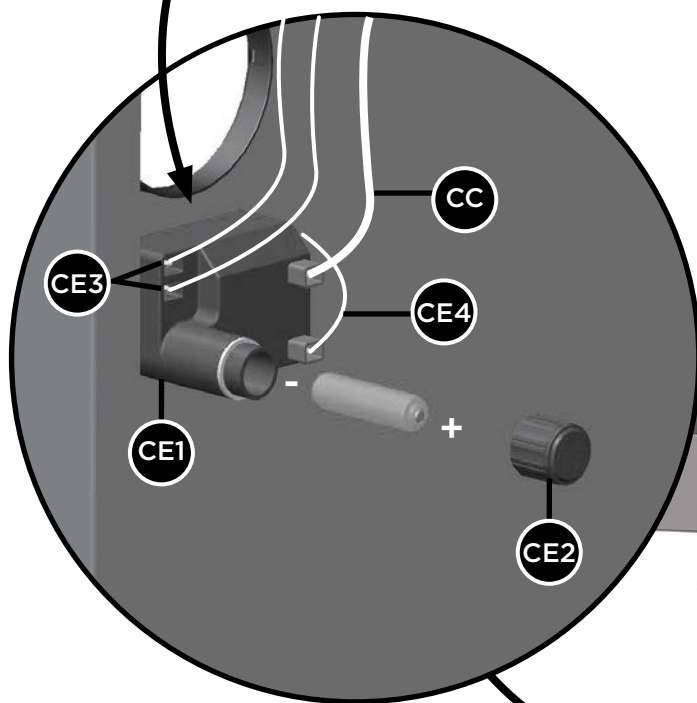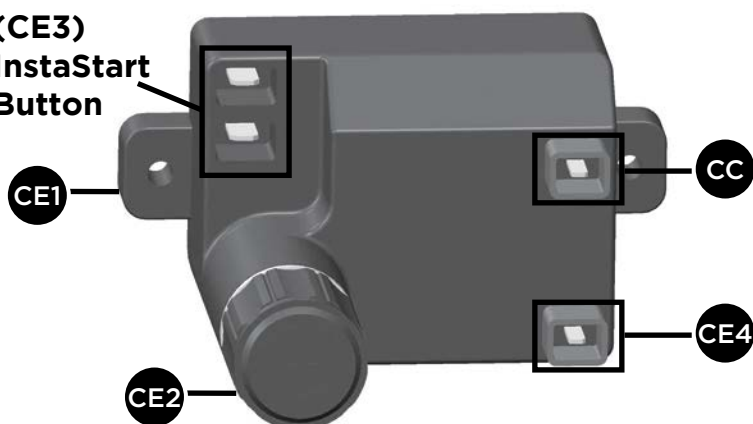


17

A.

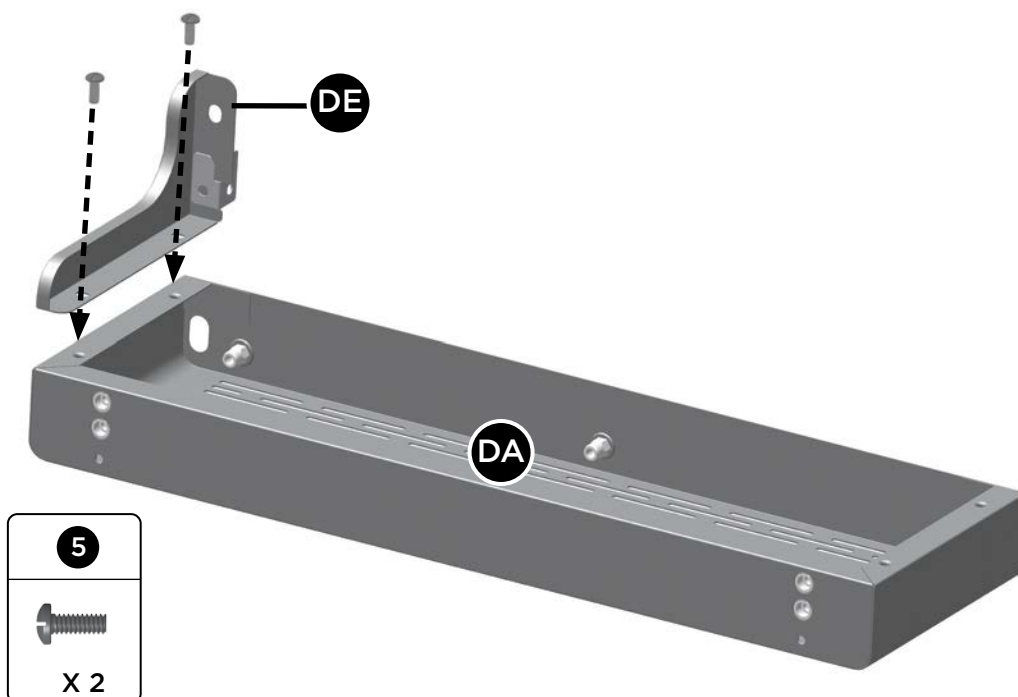

B.

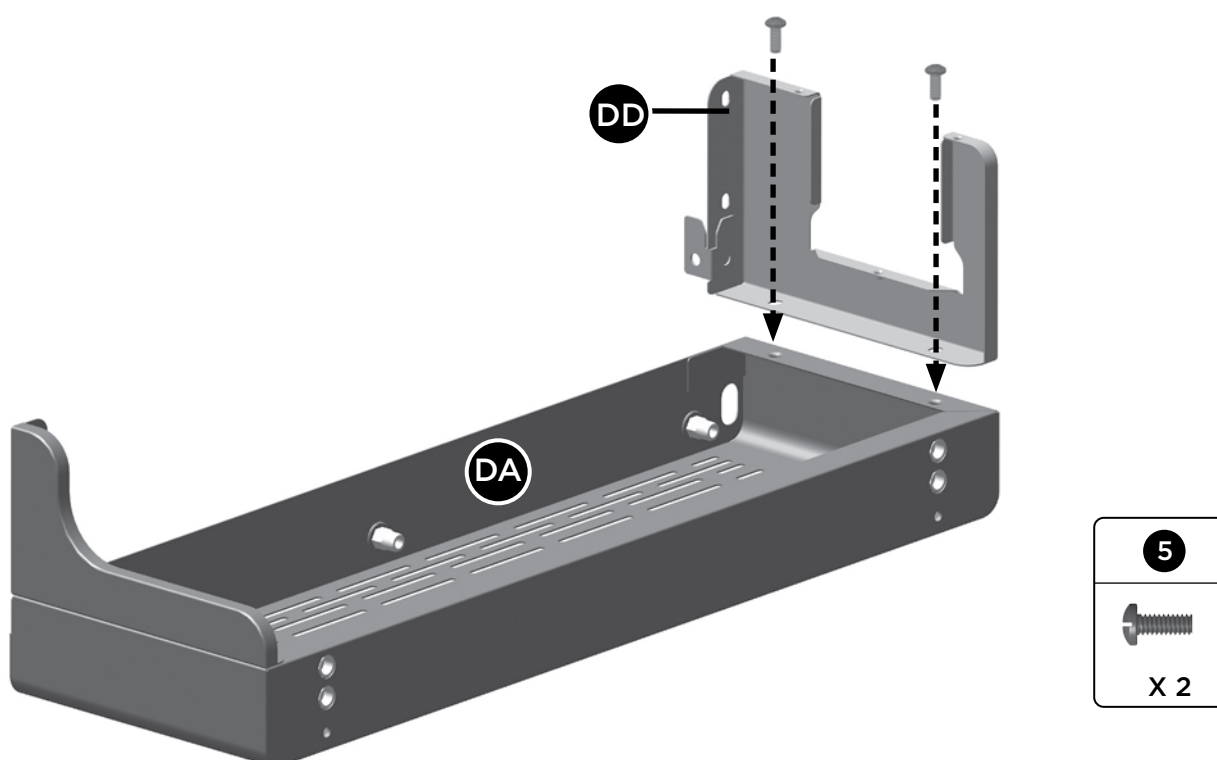


ASSEMBLY INSTRUCTIONS

18


TIP:

- 1.Ensure that the rubber side of the rubberized washer makes contact with the burner box.
- 2.Only tighten screw halfway.

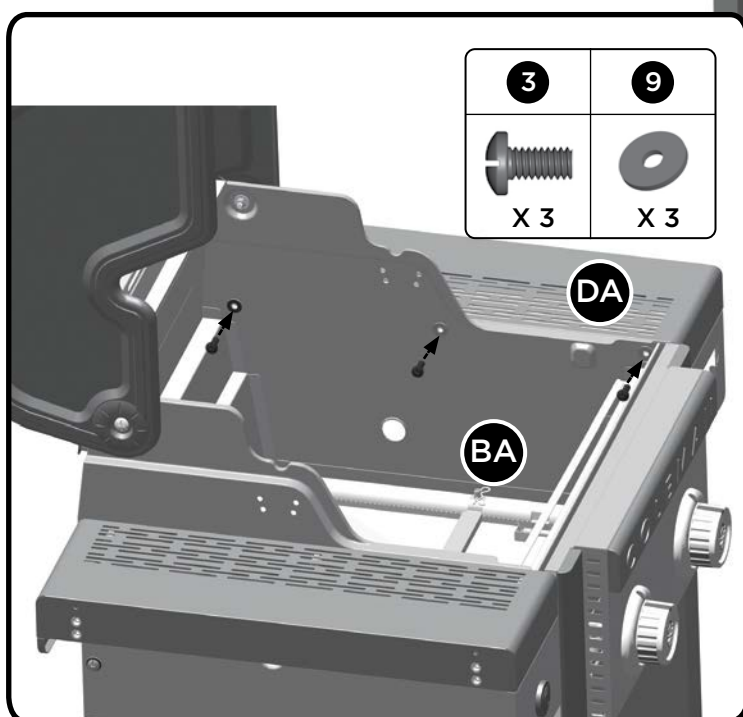


TIP:

Only tighten screw halfway.

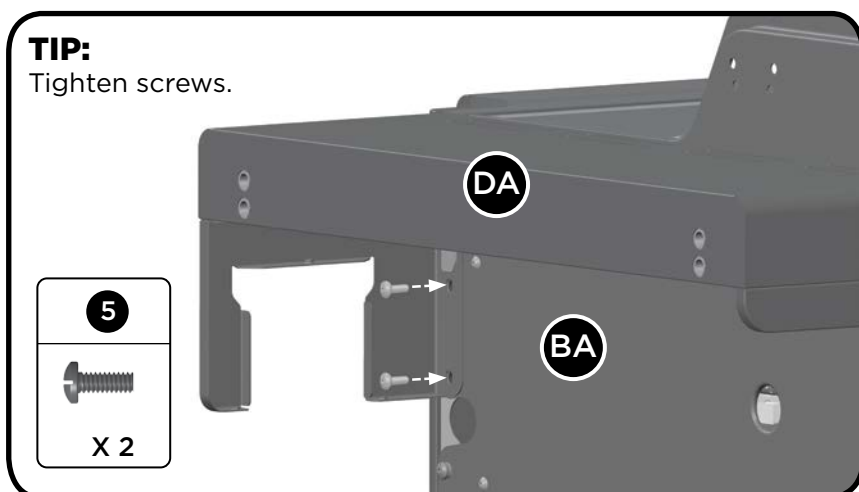

TIP:

Tighten screws.

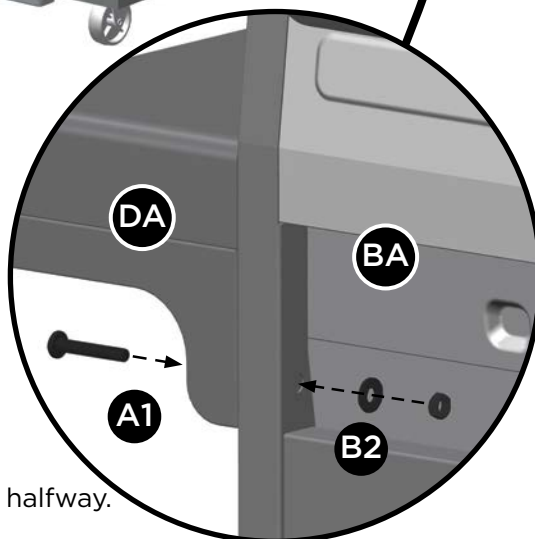


| A1 |
|-----|
| 2 |
| X 1 |


| B2 | |
|-----|-----|
| 9 | 10 |
| X 1 | X 1 |

19





TIP:
Tighten screws.

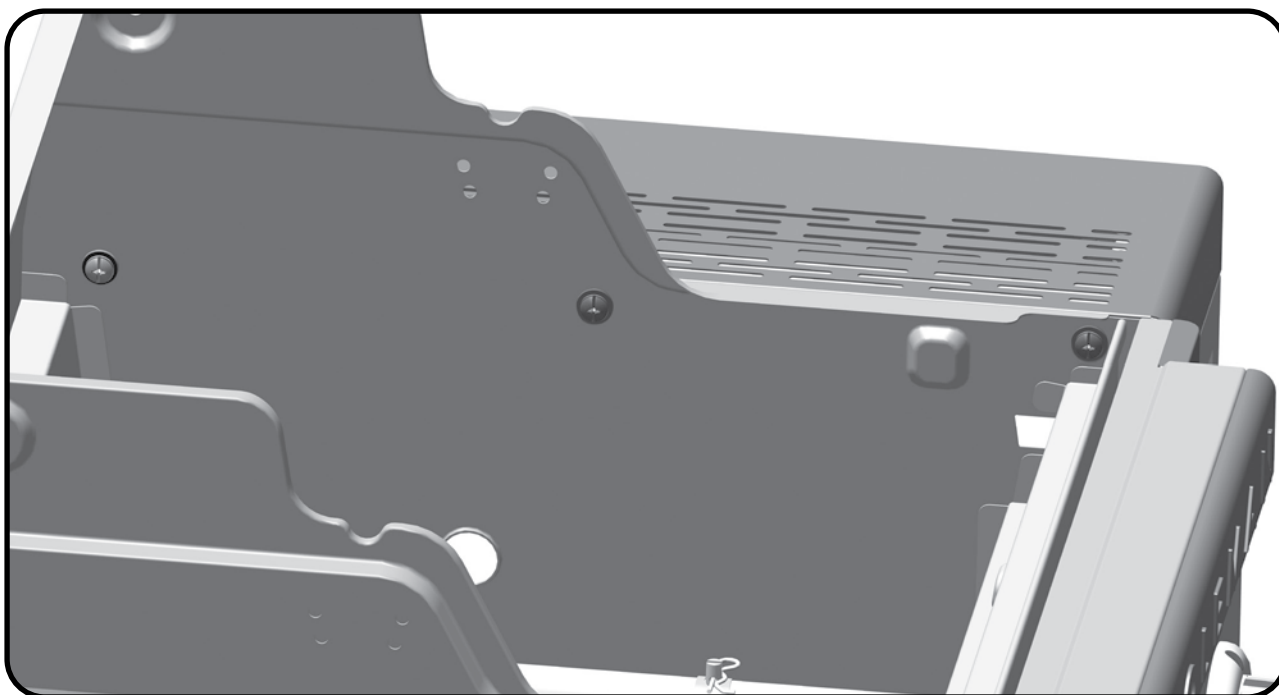

TIP:
Tighten screws.

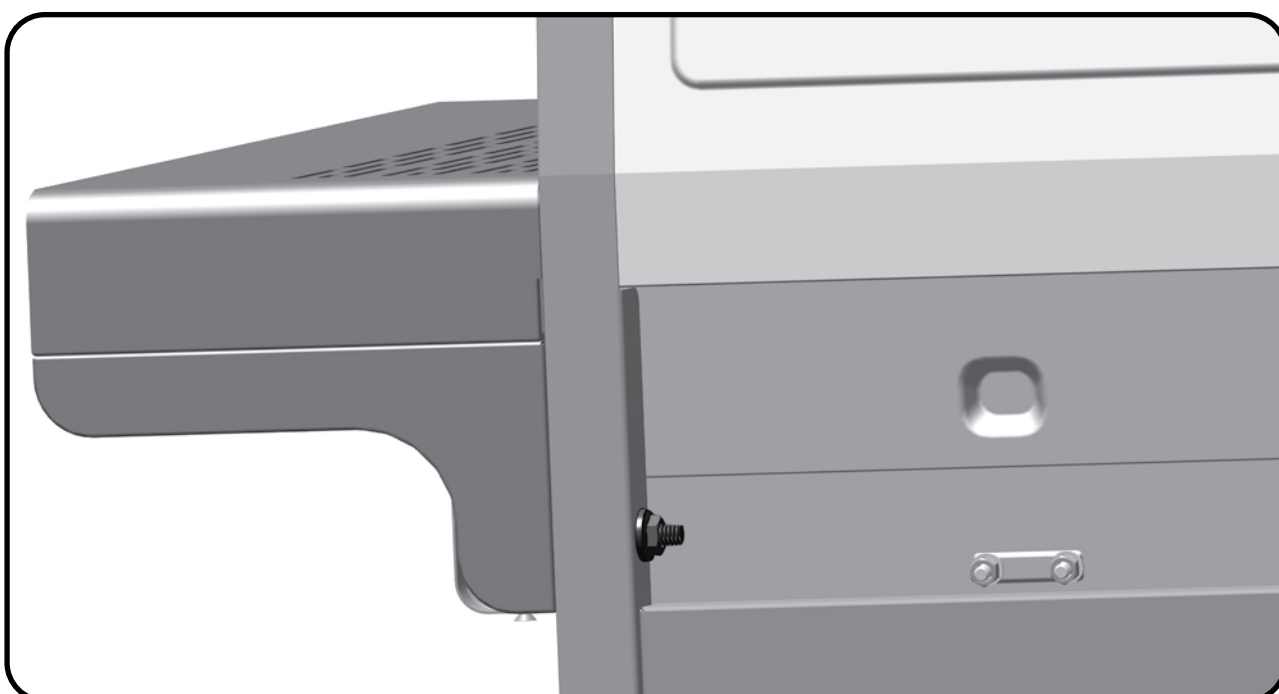





20

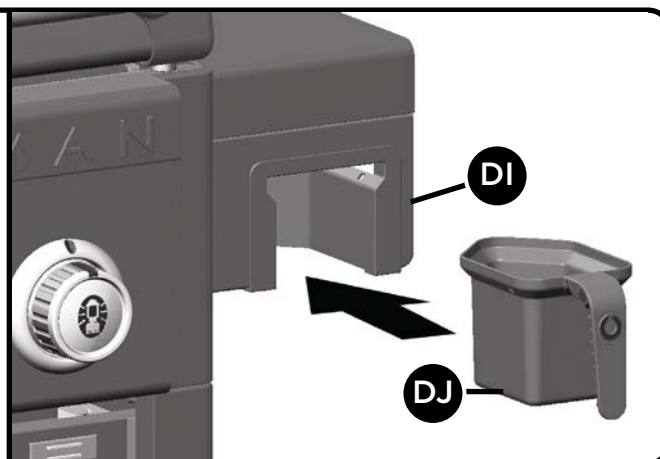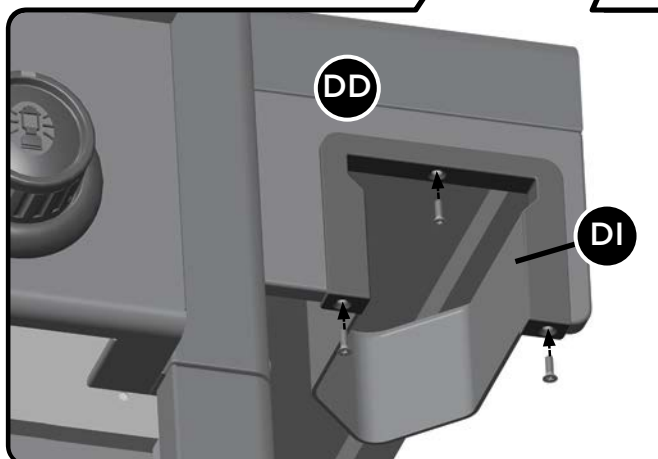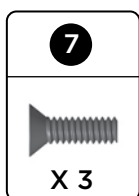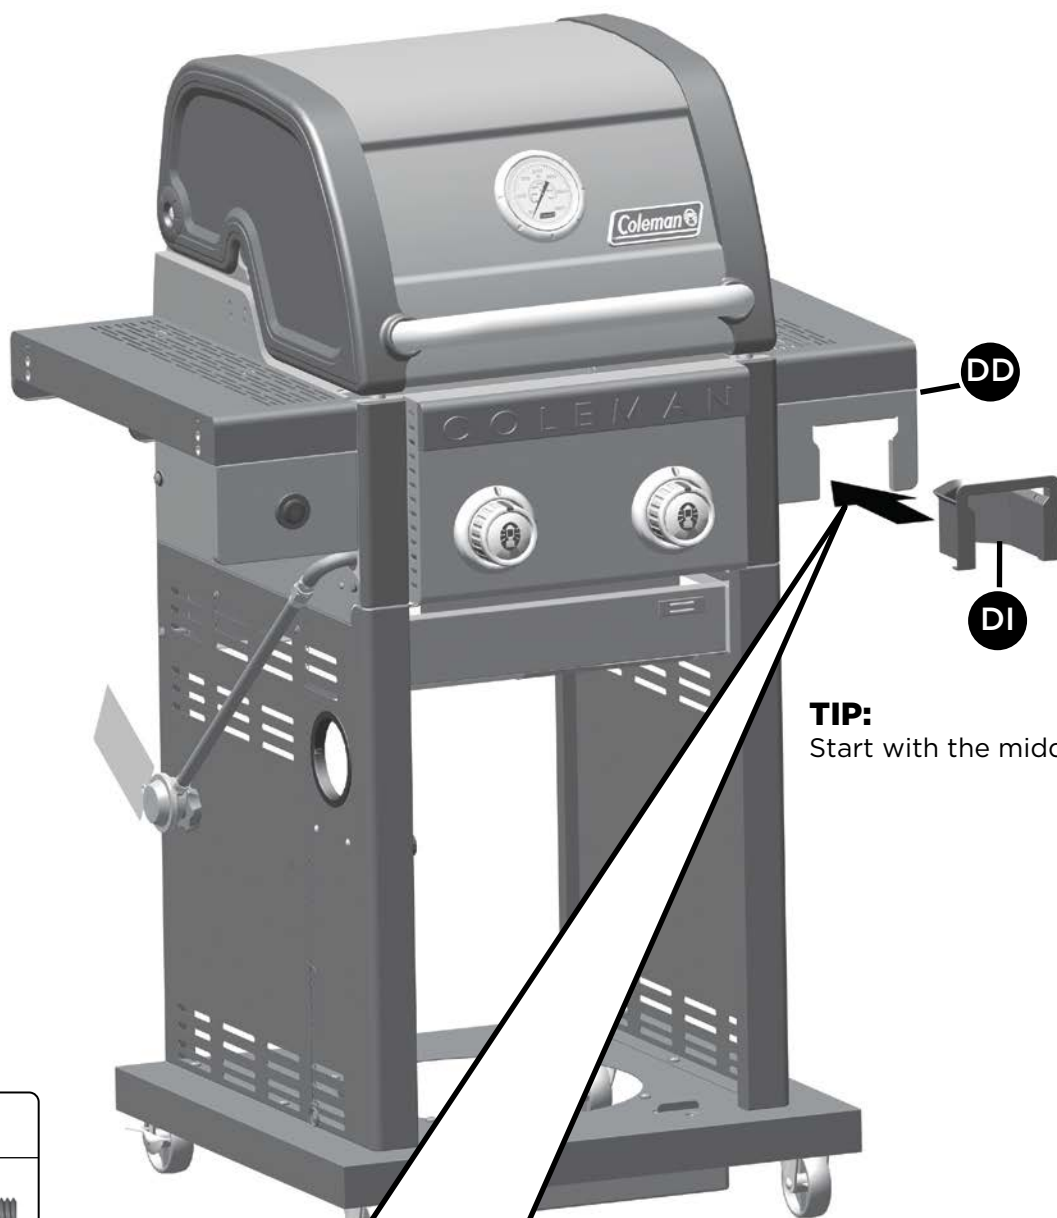


ASSEMBLY INSTRUCTIONS

21

A.

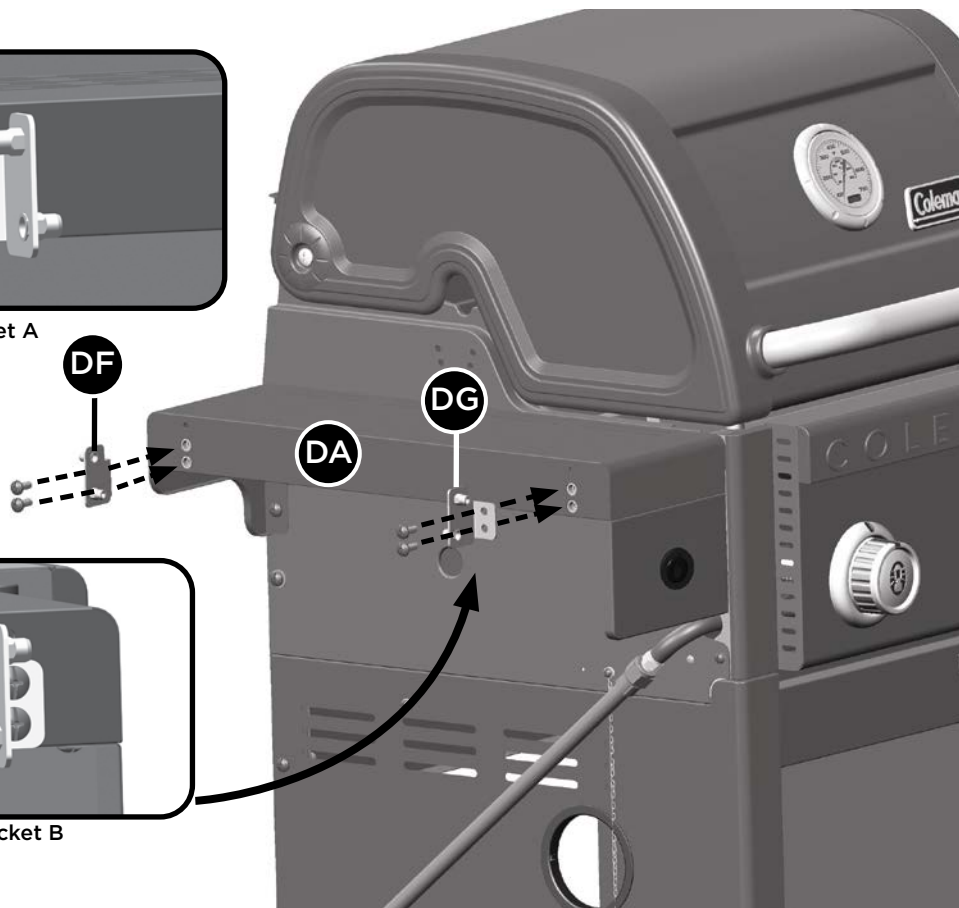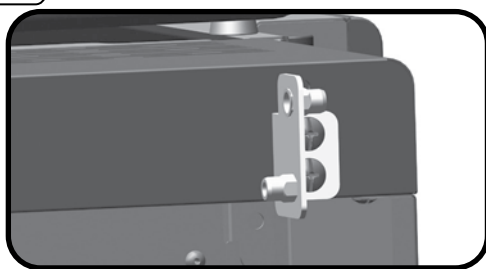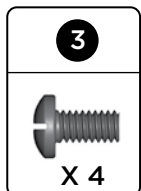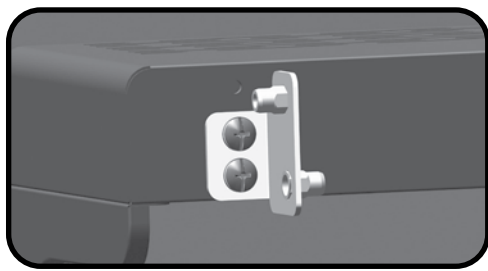


B.

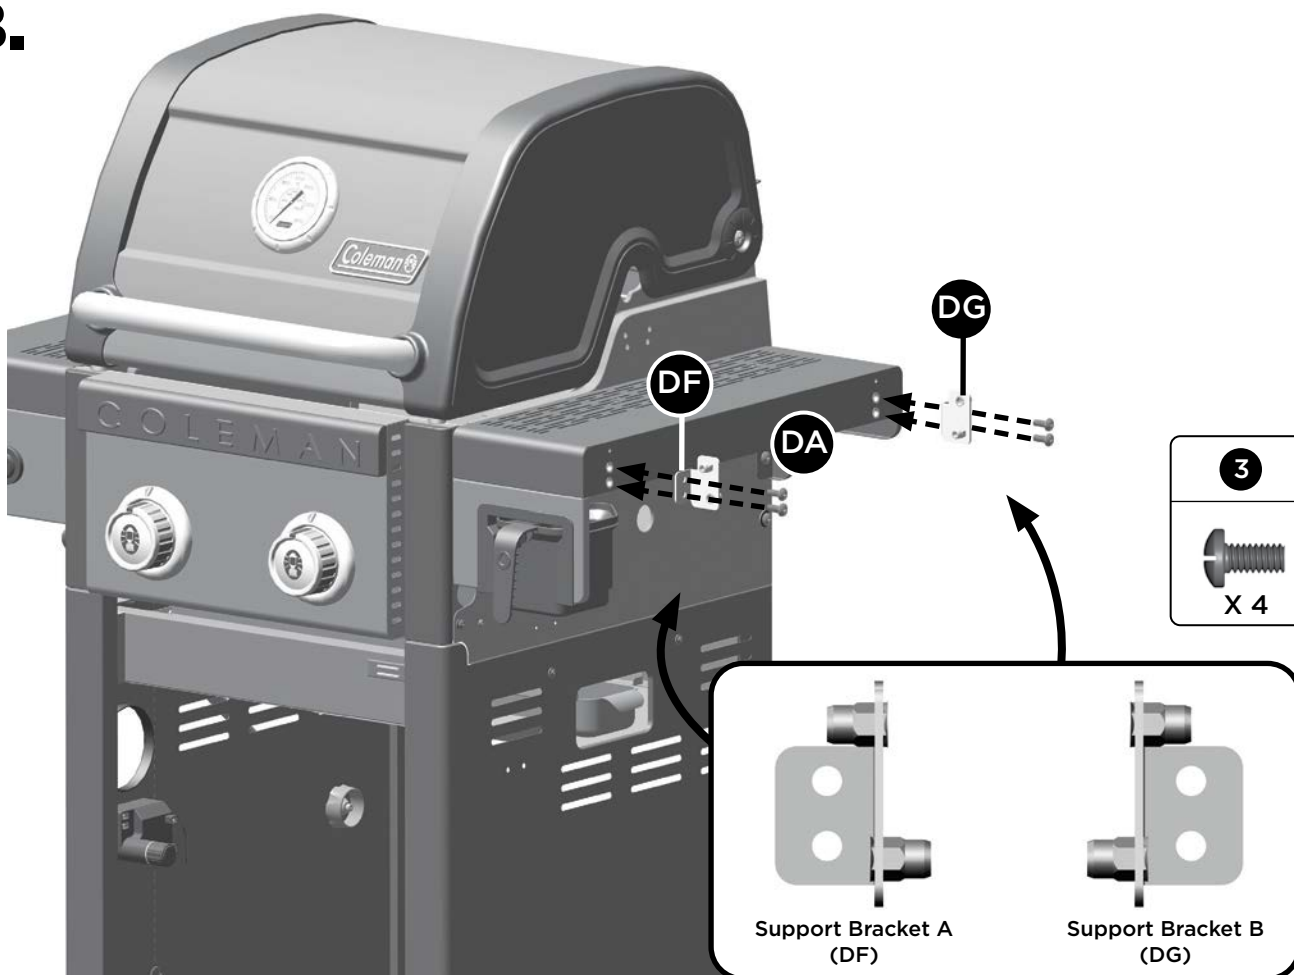

ASSEMBLY INSTRUCTIONS

22

C.

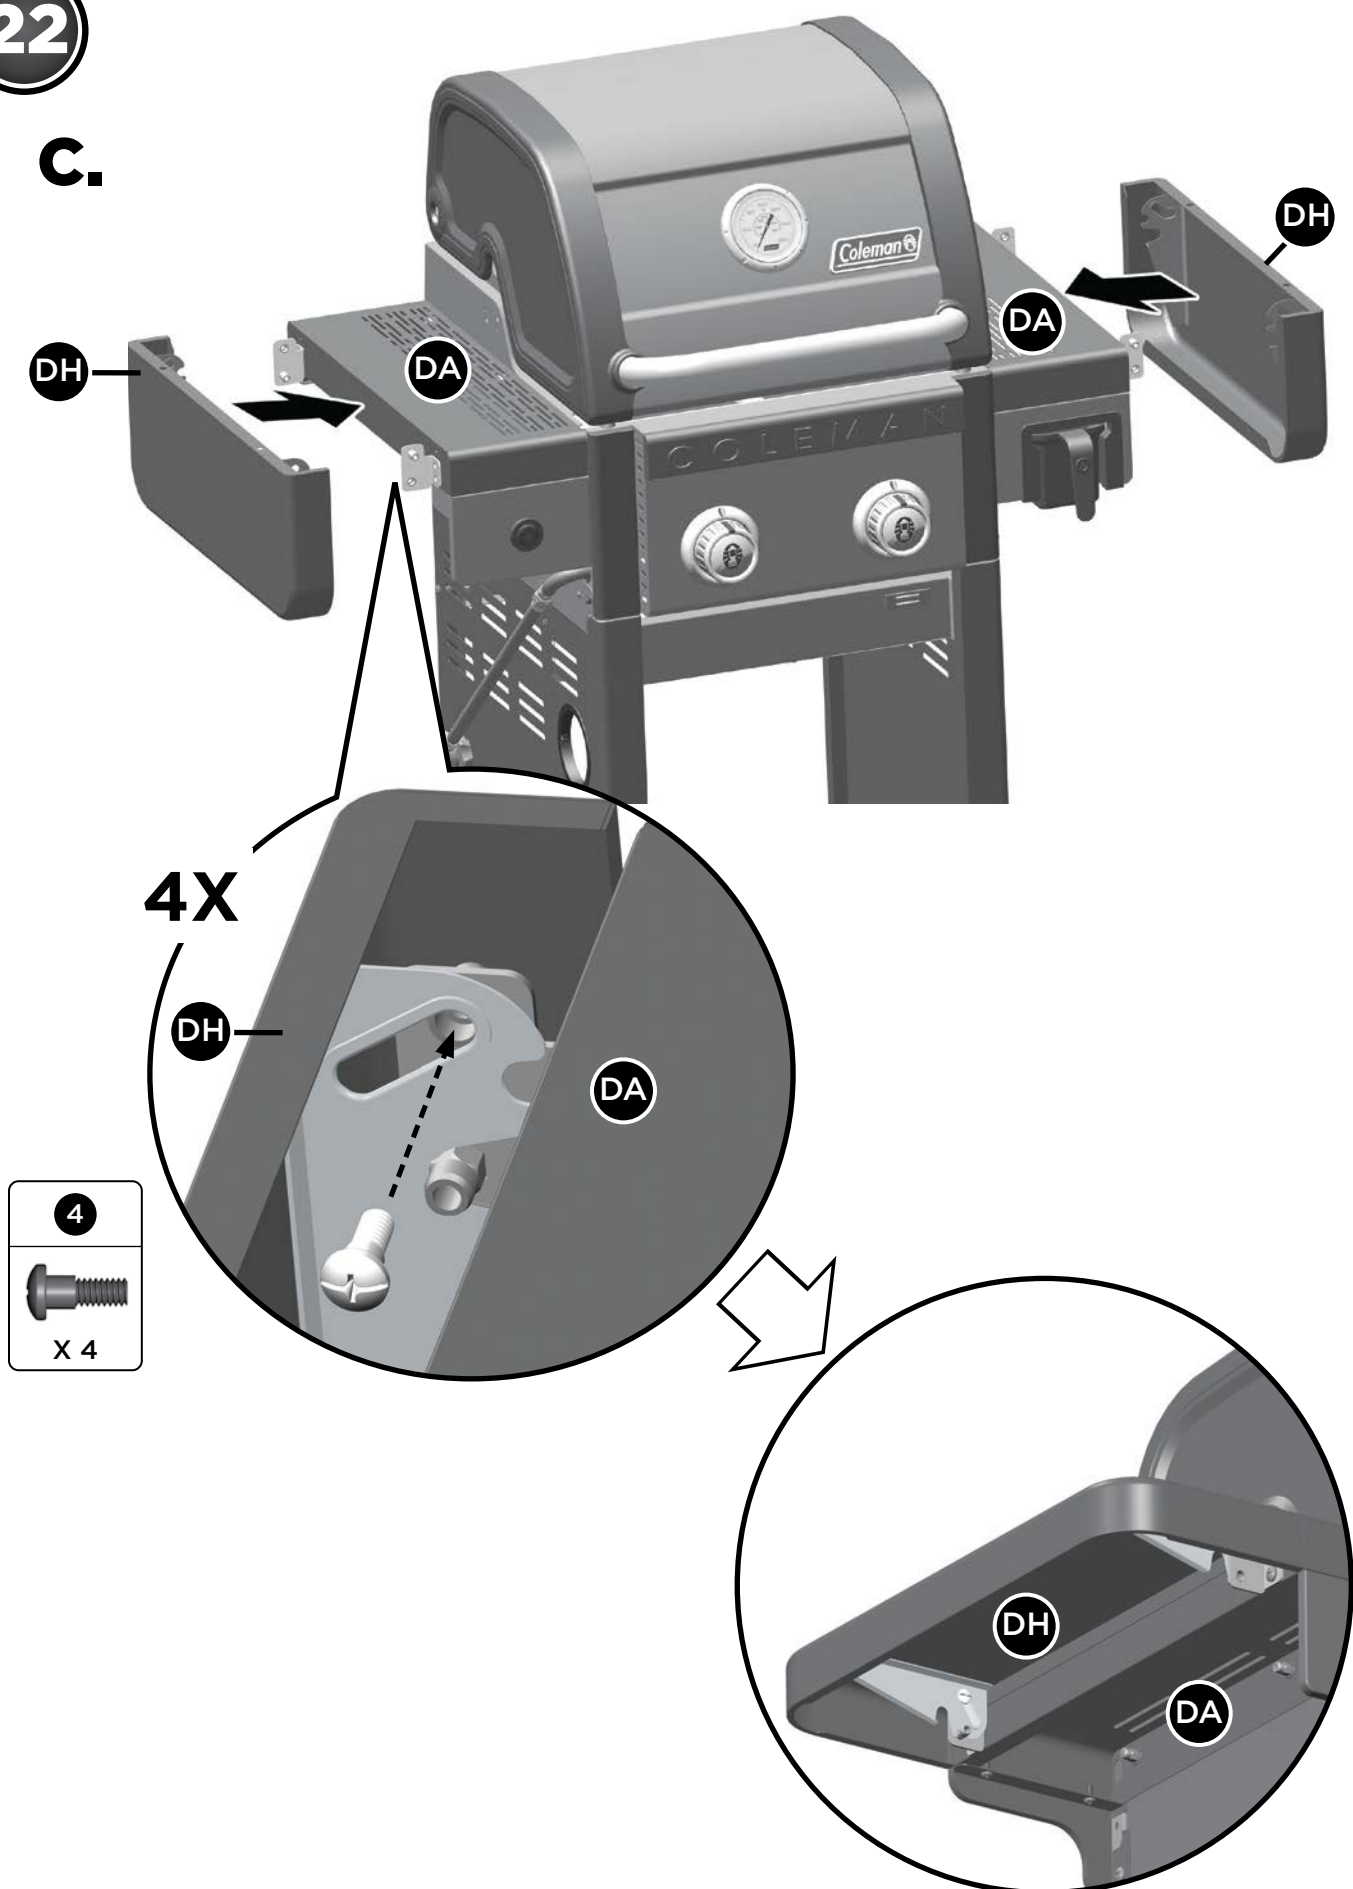

ASSEMBLY INSTRUCTIONS

23

8



X 4



EI

EI

GAP

TIP:

Ensure that all wires pass through the Left Heat Shield gap.

ASSEMBLY INSTRUCTIONS

24

8



X 4




ASSEMBLY INSTRUCTIONS

25


TIP:

Remove the Ignition Battery Cover and then install the Ignition Box.

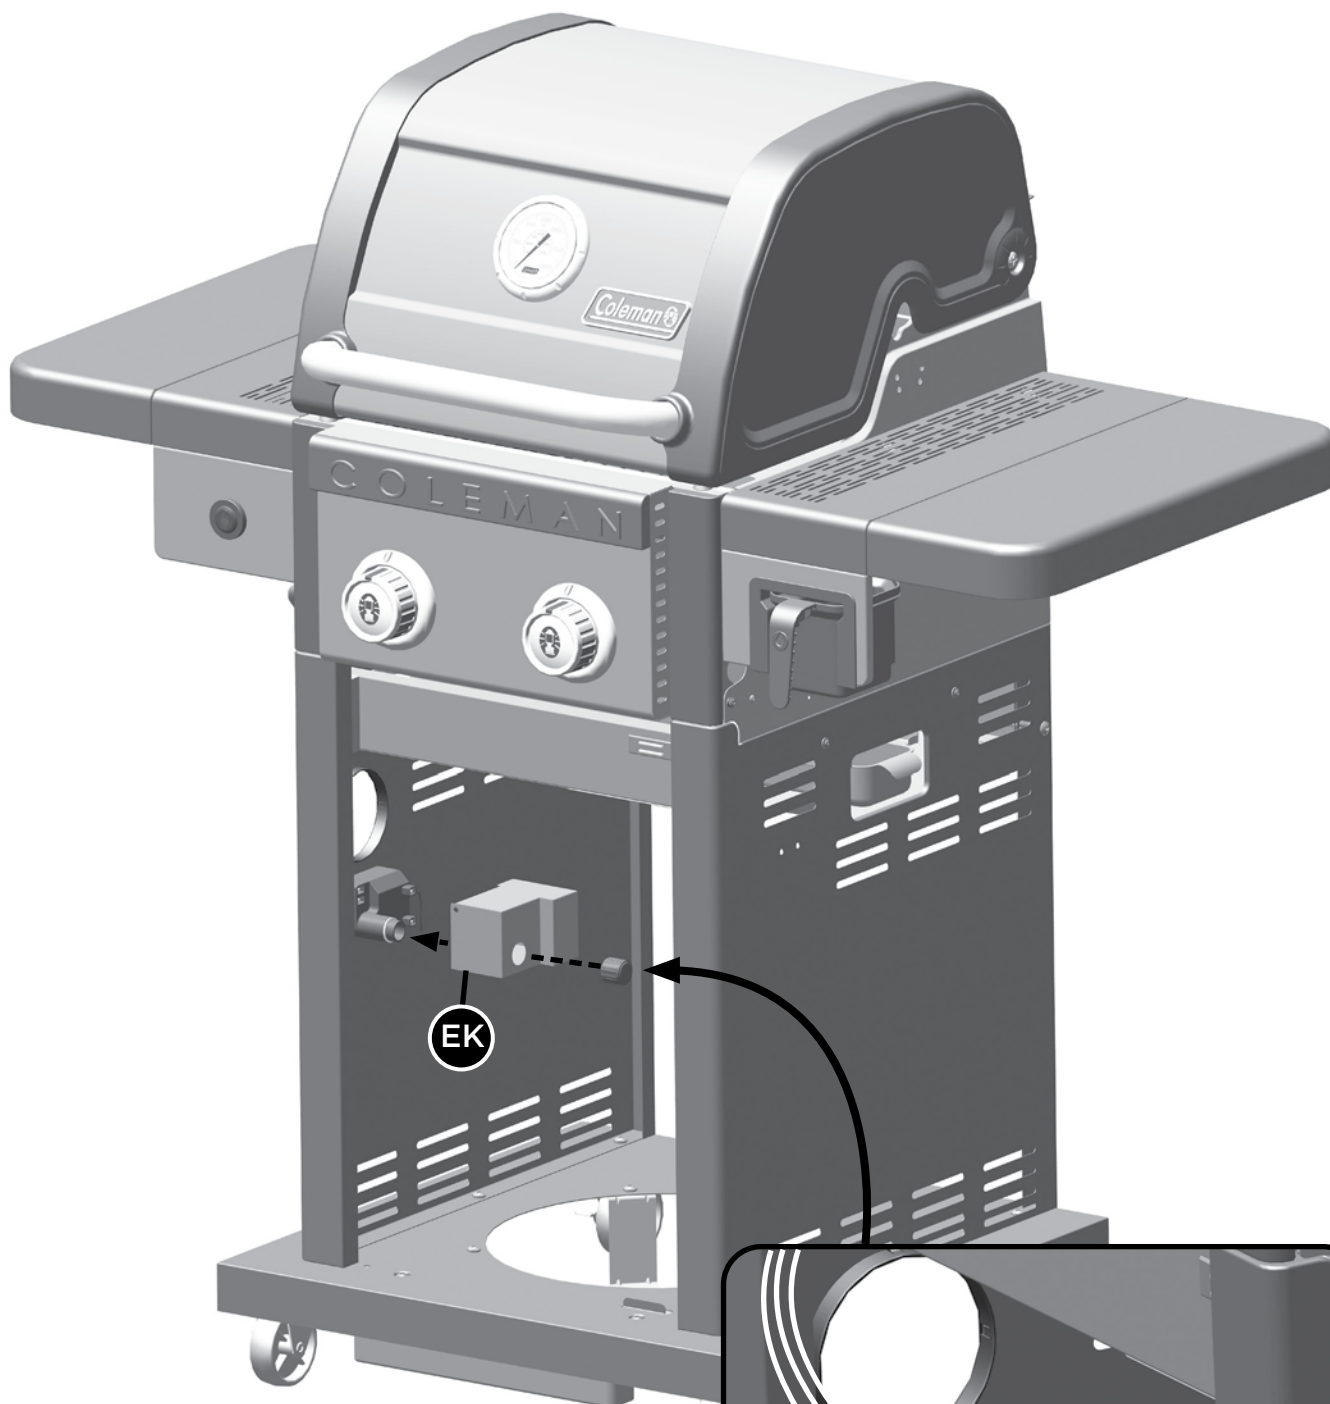


TIP:


All wires go through the gap.

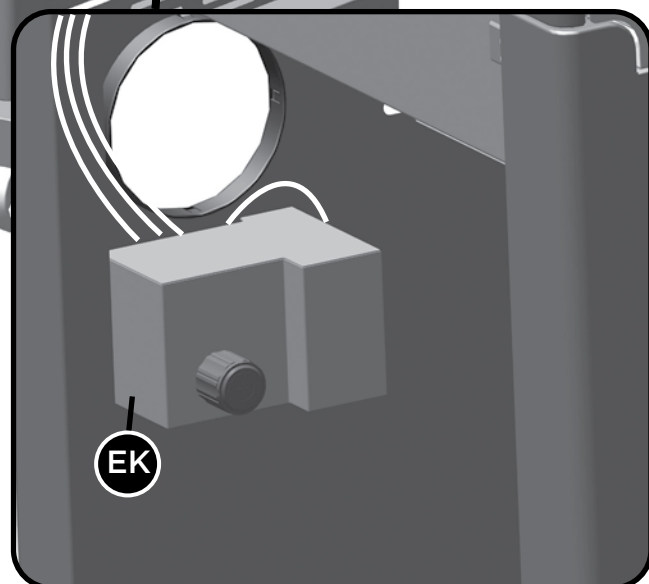


26

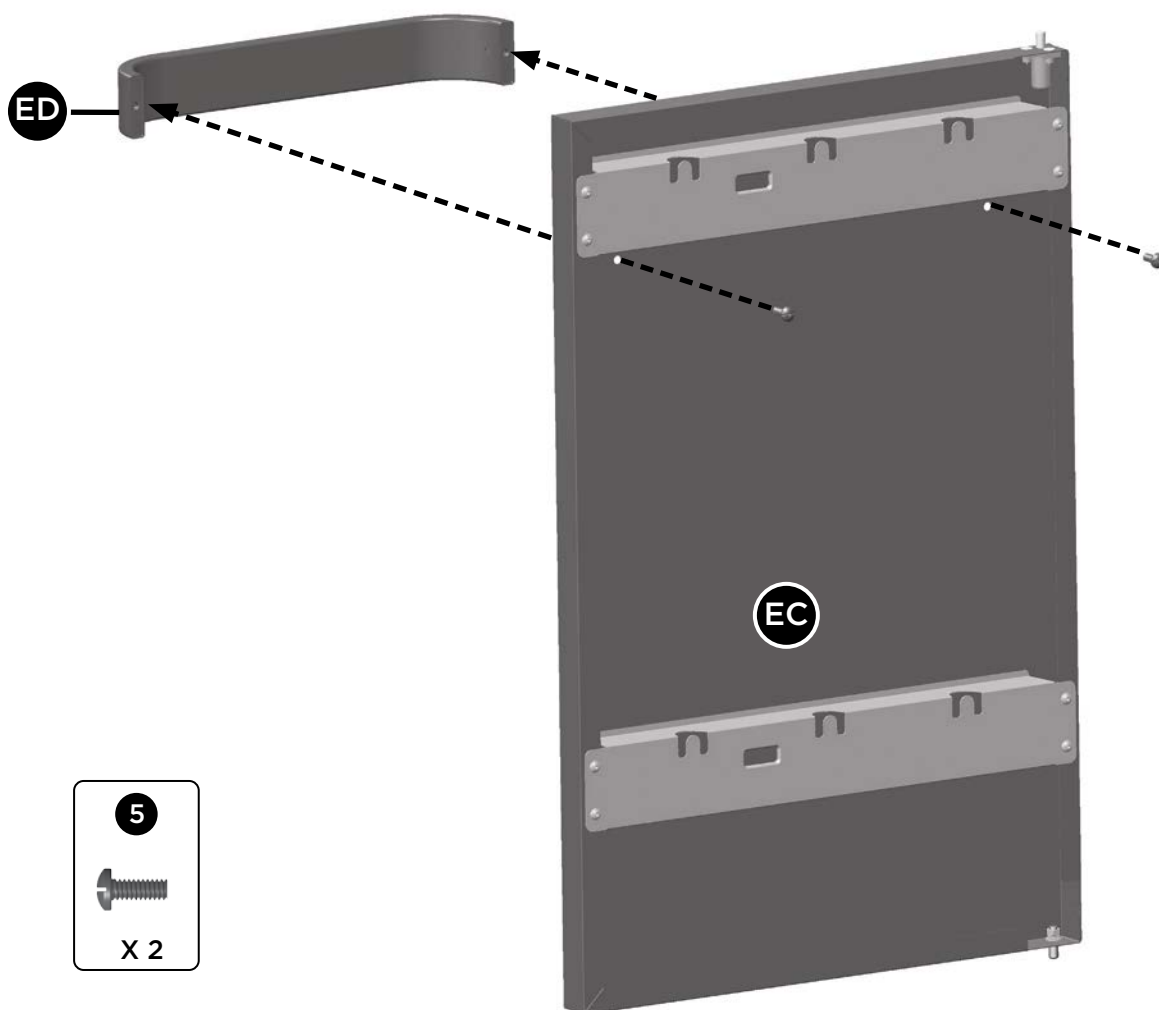


27

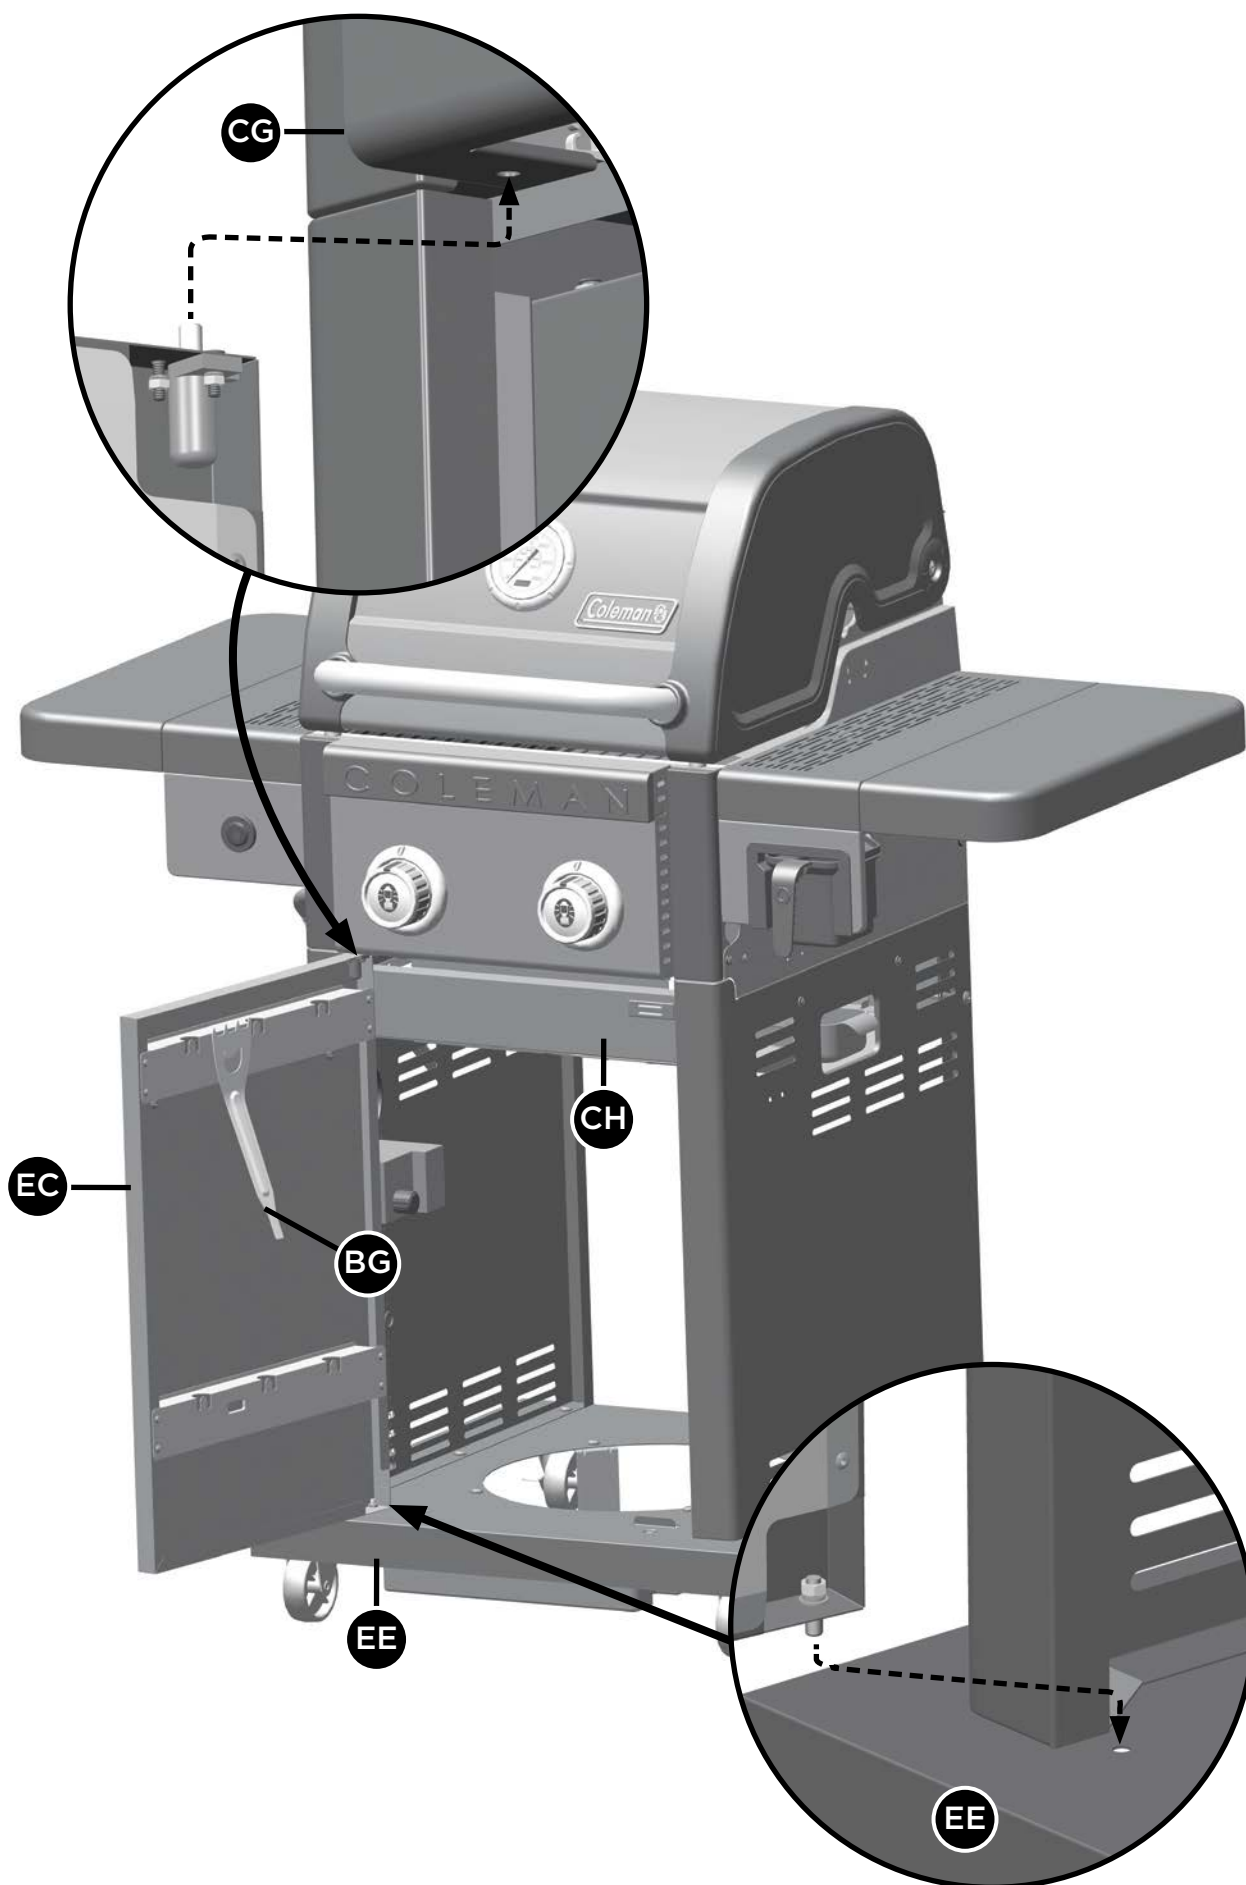

28

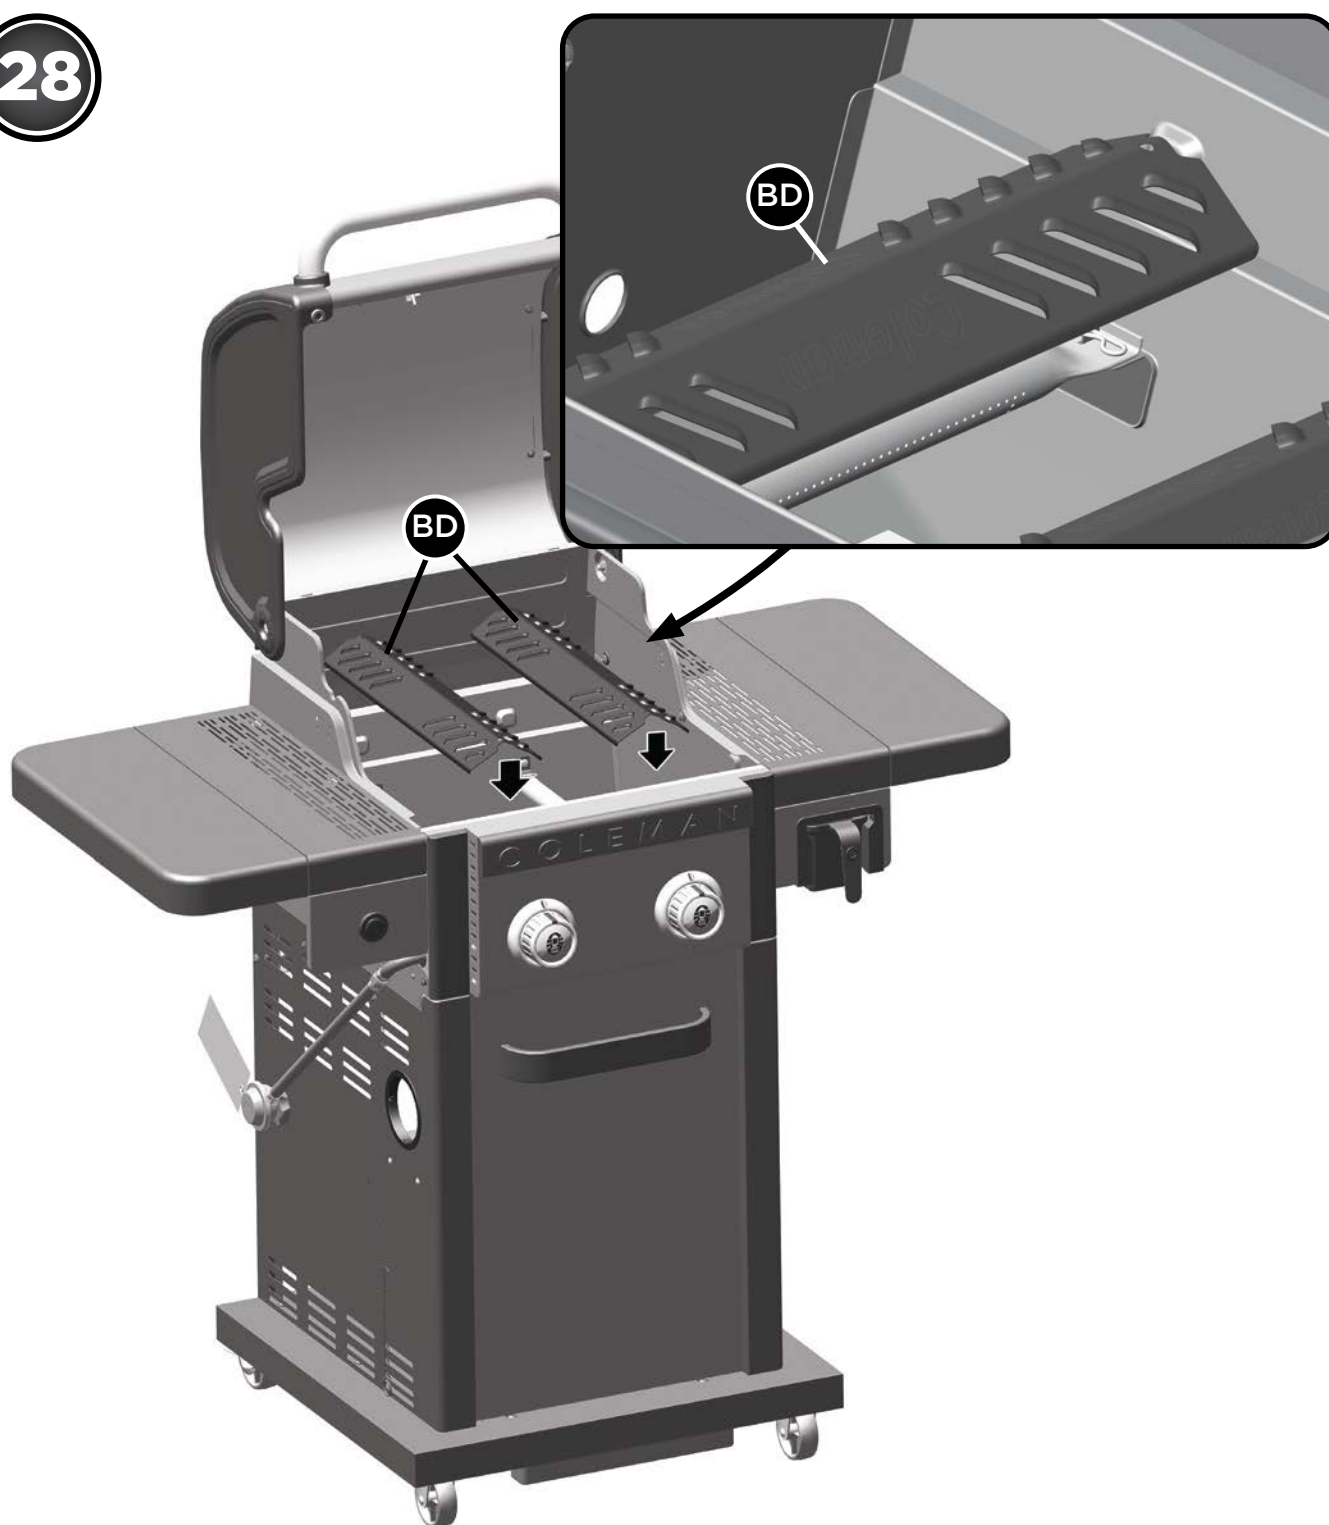

29

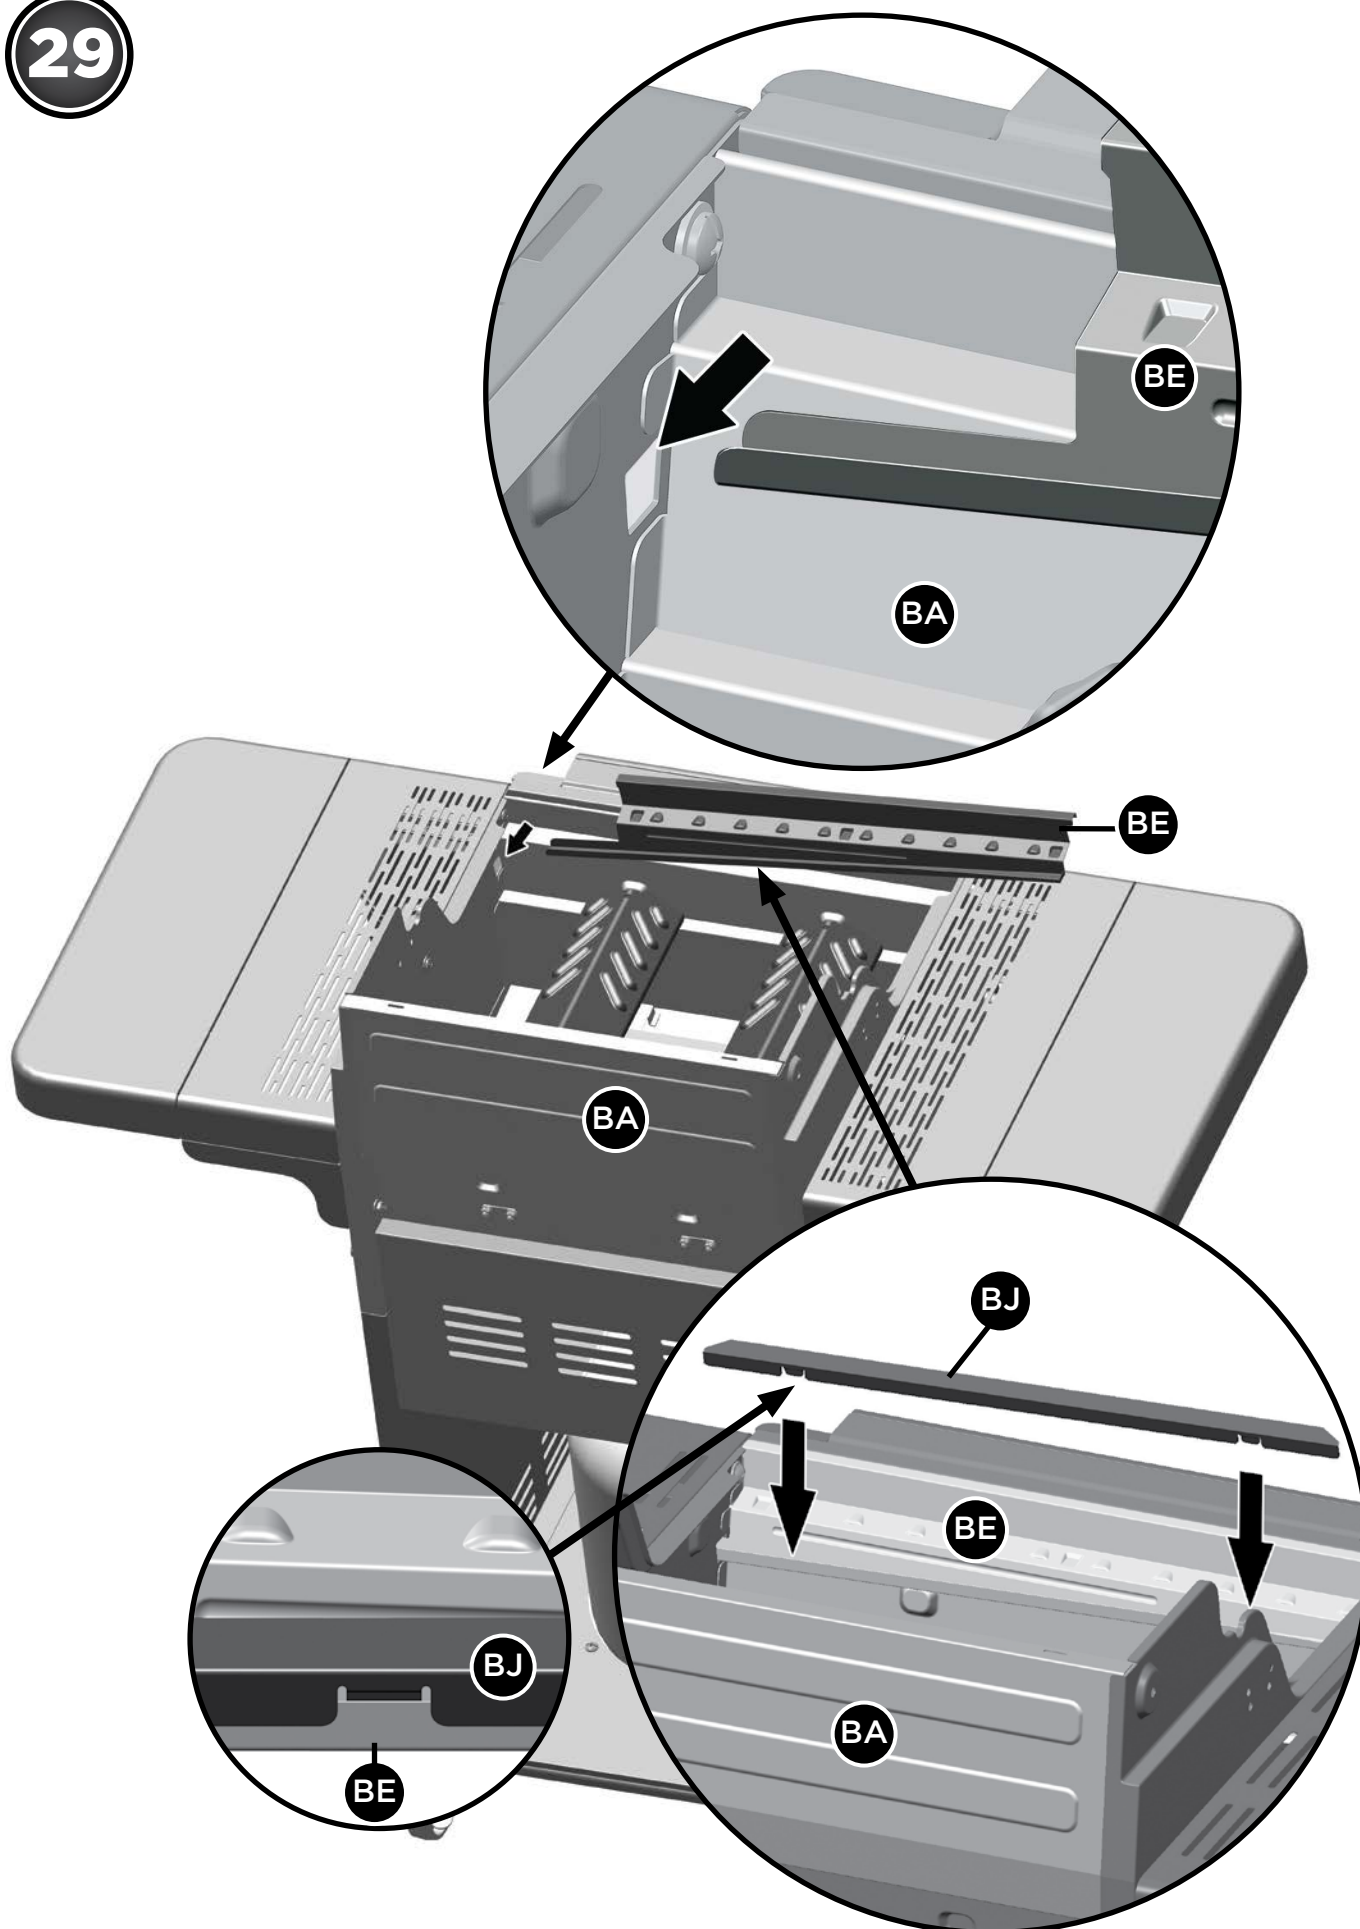

30



31



32 **FOR PROPANE MODEL ONLY.**



ADDITIONAL WARNINGS


You have now completed the Assembly of your COLEMAN® REVOLUTION™ BARBECUE.

NEXT STEPS:

1. Position your BARBECUE
2. Read SAFE USE & CARE MANUAL
3. Perform Grill Safety Check-list

⚠ WARNING:
FOR YOUR FAMILY'S SAFETY,
DO NOT ATTEMPT TO LIGHT
THIS BBQ UNTIL YOU HAVE
REVIEWED PAGES 4-7 OF
THE COLEMAN® SAFE USE &
CARE MANUAL. ALL SAFETY
AND LEAK TESTS MUST BE
PERFORMED BY THE END USER,
PRIOR TO LIGHTING THIS BBQ.

⚠ WARNING HOT SURFACES:

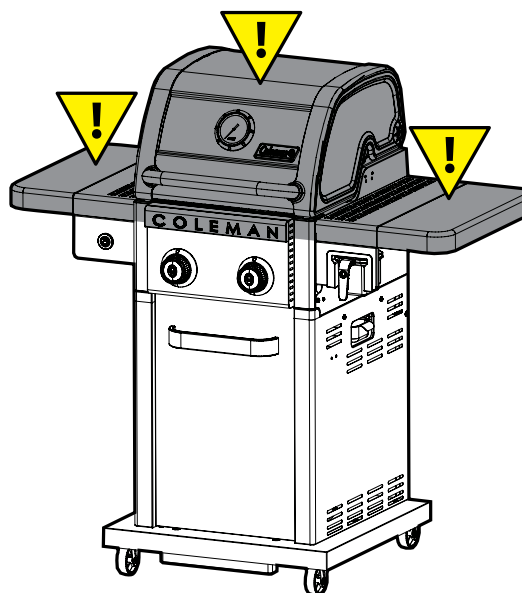

POSITION YOUR BARBECUE


Always confirm that this Barbecue is not positioned under a combustible object (e.g., an awning or umbrella) or in a covered area (e.g., porch or gazebo) before lighting it, to prevent a possible fire.

Always confirm that this Barbecue is not positioned under the overhang of a house, a garage or other structure before lighting it. An overhang will serve to deflect flare-ups and radiate heat into the structure itself, which could result in a fire.



Always confirm that this Barbecue is positioned more than 36" (91.4cm) away from any combustible materials or surfaces before lighting it, and that no gasoline or other volatile substances are stored in the vicinity of this Barbecue. The temperature of a grease fire or of the radiated heat might otherwise be sufficient to ignite nearby combustibles or volatile substances. Do not position near windows, siding, or fencing.

Always locate the Barbecue where there will be ample combustion and ventilation air, but never position it in the direct path of a strong wind.

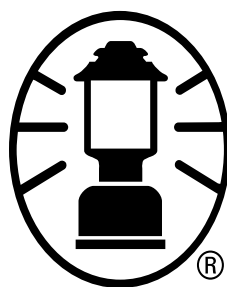Level your Barbecue for optimal performance of Flare-Free Technology™.



©2023 The Coleman Company, Inc.

Coleman®,  and  are registered trademarks of
The Coleman Company, Inc. used under license.