


HARDWARE PACK

TOOLS NEEDED FOR ASSEMBLY

- #2 Phillips screwdriver (long and short)
- 1/4" Slotted screwdriver (long and short)
- Adjustable wrench
- Pliers

No.	Description	Part Number	Qty.
1	1/4"-20UNCx50 Screw	20120-13050-250	4
2	1/4"-20UNCx38 Screw	20120-13038-250	6
3	1/4"-20UNCx16 Screw	20120-13016-250	50
4	1/4"-20UNC Screw	G353-0014-9000	4
5	NO.10-24UNCX16 Screw	20124-10016-250	8
6	NO.10-24UNCX13 Screw	20124-10013-250	27
7	NO.10-24UNCX10 Screw	20124-10010-250	2
8	ST4.8X10 Tapping Screw	22500-48010-810	2
9	NO.8-32 X 3/8, Philips Flat Head	20332-08010-250	3
10	ST4.2X10 Tapping Screw	22500-42010-137B	17
11	ST4.2X6 Tapping Screw	22500-42006-137	1
12	NO.10 Screw	G537-0015-9000	2
13	Screw for Vent	G531-0048-9081	2
14	1/4"-20UNC Flange Nut	31220-13000-250	6
15	NO.10-24UNC Flange Nut	31224-10000-250	1
16	Rubberized Washer	G501-0054-9100	9
17	Aluminum Washer	G466-0042-9000	18
18	φ5 Lock Washer	41400-05000-250	10
19	Compression Spring	G528-0058-9000	2
20	Hitch Pin	G515-0013-9000	2
21	Wheel Lock Pin	G350-0026-9000	1
22	Ash Sweep Handle	G531-0047-01	1

⚠ Caution:
Sheet metal can cause injury. Wear gloves when installing the grill.

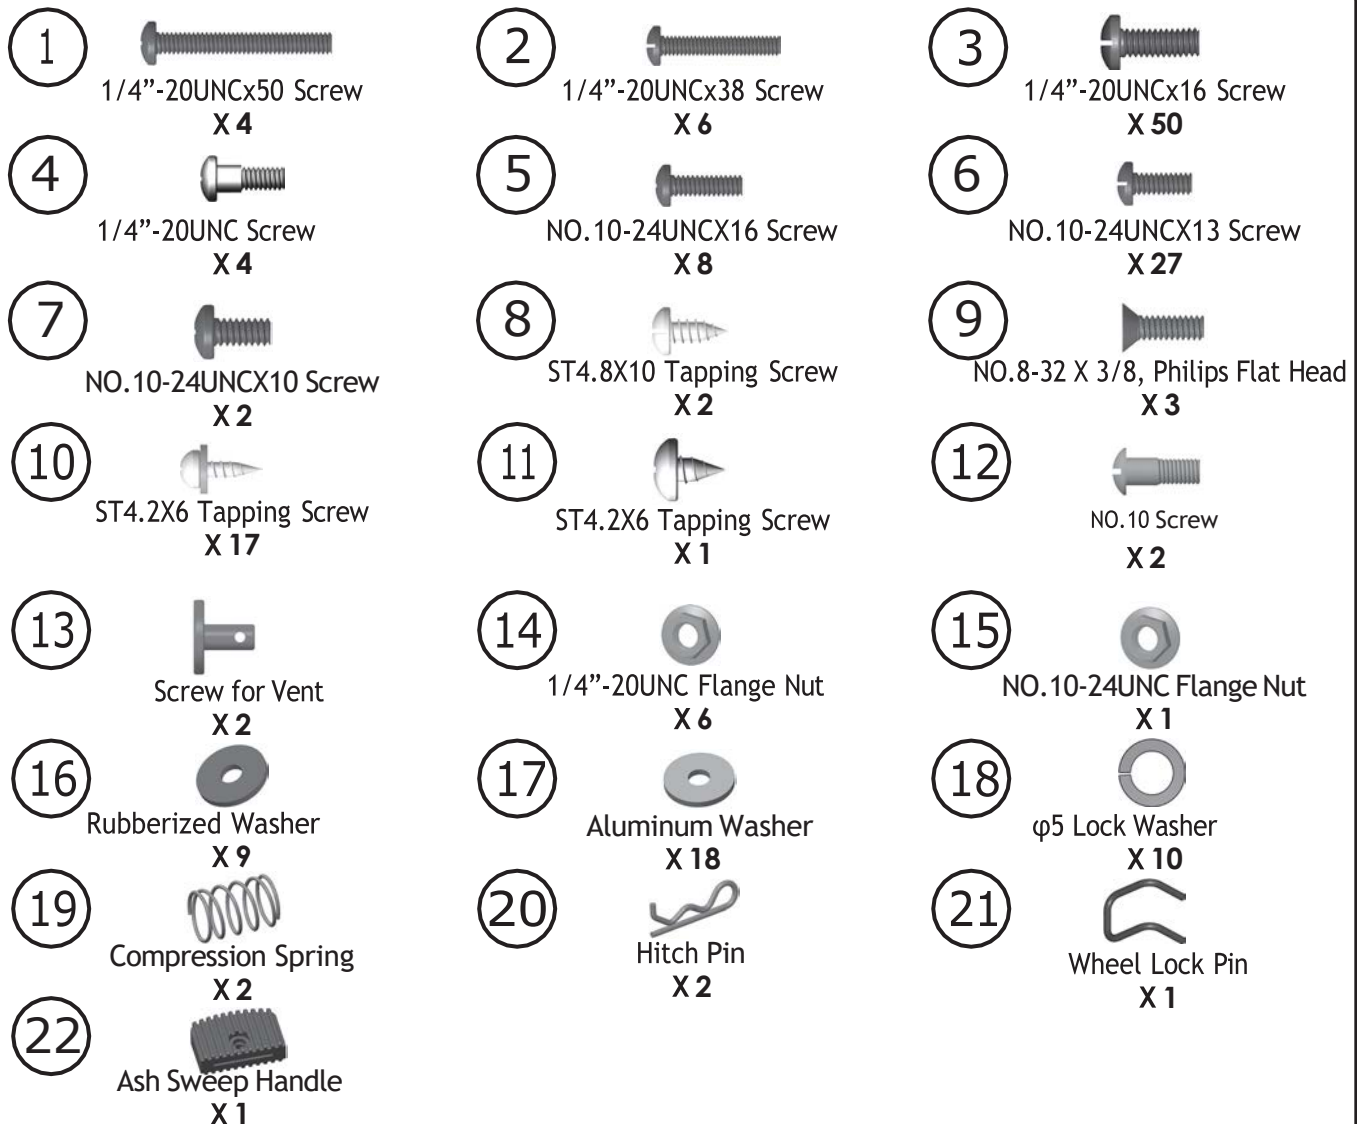

BEFORE ASSEMBLING THIS BARBECUE, READ THE INSTRUCTIONS CAREFULLY.

Assemble the barbecue on a flat, clean surface. Grill is heavy. Two people are recommended to assemble this barbecue.

PARTS LIST FOR G53721

Item No.	Qty.	Description	Part No.	Item No.	Qty.	Description	Part No.
AA	1	Charcoal Lid	G537-6000-01	CN	1	Grease Cup, Burner Box	G416-0015-01
AB	1	Charcoal Lid Handle	G537-6100-01	CO	2	Grease Cup Rails	G466-0034-01
AC	1	Lid Vent	C350-0019-01	CP	1	Upper Back Panel	G532-0022-01
AD	1	Lid Hinge	G537-6200-01	CQ	1	Lower Back Panel	G532-0090-01
AE	1	Gas Lid Assembly	G532-G500-01	CR	1	Heat Shield, Burner Box	G532-0023-01
AF	1	Gas Lid Handle	G532-0056-01	CS	1	Left Heat Shield	G532-0093-01
AG	1	Thermometer	G363-0035-01	CT	1	Back Brace, Charcoal Side	G537-1300-01
AH	1	Thermometer Bezel	G532-0006-01	CU	1	Right Heat Shield	G537-0026-01
AI	2	Screw for Top Lid	G466-0007-01				
AJ	2	Lid Bumper, Front	G527-0002-02	DA	1	Right Side Shelf Table Base	G363-7200-01
AK	2	Lid Bumper, Rear	G303-0038-01	DB	1	Right Side Shelf Fascia	G537-3800-01
				DC	1	Grease Cup Holder, Flare-Free	G532-0031-02
BA	1	Fire Bowl	G537-0010-01	DD	1	Grease Cup, Flare-Free	G532-0031-02
BB	1	Charcoal Lighting Burner	G537-0800-02	DE	1	Right Side Shelf Table Rear Brace	G537-1100-01
BC	1	Electrode Set, Charcoal Lighting Burner	G458-9201-01	DF	2	Support Bracket A	G363-1300-01
BD	1	Ash Sweep	C305-0006-02	DG	2	Support Bracket B	G363-1400-01
BE	1	Ash Sweep Handle (#23)	G531-0047-01	DH	2	Side Shelf Table	G537-1200-01
BF	1	Charcoal Grate	G537-0012-01				
BG	1	Cooking Grate, Charcoal Side	C305-0300-01	EA	1	Left Cart Side Panel	G537-4300-01
BH	1	Fire Bowl Vent	C305-0400-02	EB	1	Middle Cart Panel	G537-3400-01
BI	1	Fire Bowl Vent Handle	C305-0009-01	EC	1	Right Cart Side Panel	G532-G900-01
BJ	1	Ash Catcher	C305-0010-01	ED	1	Support Bracket, Regulator	G466-00C3-01
BK	1	Ash Catcher Handle	C305-0011-01	EE	1	Bottom Shelf	G537-2900-01
BL	1	Burner Box Assembly	G532-3100-01	EF	3	Locking Castor	G350-0023-01
BM	3	Main Burner	G532-K200-01	EG	3	Castor	G350-0024-01
BN	1	Electrode Set, Main Burner	G515-0067-01	EH	1	Lower Front Panel	G537-0004-01
BO	2	Carryover Assembly	G532-0014-01	EI	1	Ash Catcher Access door	G537-4400-01
BP	3	Heat Distribution Plate	G532-0016-01	EJ	2	Magnet, Ash Catcher Access Door	G213-0022-01
BQ	1	Grease Channel	G532-0015-01	EK	1	Handle, Ash Catcher Access Door	G353-0024-01
BR	4	Cooking Grate, Gas Side	G532-0017-02	EL	1	Stopper, Ash Catcher Access Door	G537-0003-02
BS	1	Flare Free Cleaning Tool	G532-0049-01	EM	1	Interior Cart Divider	G537-0005-01
BT	1	Warming Rack	G532-0018-01	EN	1	Left Door Assembly	G532-9100-01
BU	1	Match Holder	G501-0068-01	EO	1	Right Door Assembly	G532-9200-01
BV	1	Grease Channel Shield	G532-0063-01	EP	2	Handle, Door Assembly	G532-0026-01
BW	1	Griddle	G532-0088-01	EQ	2	Magnet, Door Assembly	G527-0037-01
				ER	1	Ignition Box	G363-0040-01
CA	1	Control Panel, Charcoal Side	G537-0025-01	ES	1	Burner Plate	G537-0028-01
CB	1	Fire Bowl Mounting Shelf	G537-0600-01				
CC	3	Tool Hooks	G360-0016-01	F1	1	Hardware Pack	G537-B021-01
CD	1	Manifold Assembly	G537-2800-01	F2	1	Assembly Manual	G537-M021-01
CE3	1	Instastart™ Ignition Button	G532-0082-01	F3	1	Safe Use and Care Manual	G363-M023-02
CF	1	Regulator	G537-0022-01	F4	1	Charcoal Grill Cooking Guide	G537-M021-02
CG	1	Charcoal Ignition Burner Valve	G537-0001-01	F5	1	Tank Screw	G362-0060-01
CH	1	Metal Hose	G508-0024-01	F6	2	Clump Weight	G553-0003-01
CI	4	Control Knob	G532-3600-01	F7	1	Tank exclusion wire	G532-0077-01
CJ	4	Control Knob Bezel	G363-0026-01				
CK1	1	Electronic Ignition Assembly	G532-0019-0A				
CK2	1	Ignition Battery Cover	G532-0019-02				
CL	1	Control Panel, Gas Side	G537-0023-01				
CM	1	Front Brace	G532-9000-01				

This exploded view diagram illustrates the assembly of a microwave oven. The components are labeled with letters and numbers in circles, corresponding to the parts list on the right. The diagram shows the following parts:

- Top and Control Panel:** AA (Top cover), AB (Control panel), AC (Control panel knob), AG (Control panel display), AH (Control panel display cover), AE (Control panel display cover), AF (Control panel display cover), BT (Control panel display cover), BS (Control panel display cover).
- Interior and Cooking Components:** BA (Cooking bowl), BC (Cooking bowl support), BD (Cooking bowl support), BE (Cooking bowl support), BF (Cooking bowl support), BG (Cooking bowl support), BH (Cooking bowl support), BI (Cooking bowl support), BJ (Cooking bowl support), BK (Cooking bowl support), BL (Cooking bowl support), BU (Cooking bowl support), BV (Cooking bowl support), BW (Cooking bowl support), BX (Cooking bowl support), BY (Cooking bowl support), BZ (Cooking bowl support).
- Base and Stand Components:** CA (Base plate), CB (Base plate), CC (Base plate), CD (Base plate), CE (Base plate), CF (Base plate), CG (Base plate), CH (Base plate), CI (Base plate), CJ (Base plate), CK (Base plate), CL (Base plate), CM (Base plate), CN (Base plate), CO (Base plate), CP (Base plate), CQ (Base plate), CR (Base plate), CS (Base plate), CT (Base plate), CU (Base plate), CV (Base plate), CW (Base plate), CX (Base plate), CY (Base plate), CZ (Base plate).
- Assembly and Fasteners:** AD (Screw), AE (Screw), AF (Screw), AG (Screw), AH (Screw), AI (Screw), AJ (Screw), AK (Screw), AL (Screw), AM (Screw), AN (Screw), AO (Screw), AP (Screw), AQ (Screw), AR (Screw), AS (Screw), AT (Screw), AU (Screw), AV (Screw), AW (Screw), AX (Screw), AY (Screw), AZ (Screw), BA (Screw), BB (Screw), BC (Screw), BD (Screw), BE (Screw), BF (Screw), BG (Screw), BH (Screw), BI (Screw), BJ (Screw), BK (Screw), BL (Screw), BU (Screw), BV (Screw), BW (Screw), BX (Screw), BY (Screw), BZ (Screw), CA (Screw), CB (Screw), CC (Screw), CD (Screw), CE (Screw), CF (Screw), CG (Screw), CH (Screw), CI (Screw), CJ (Screw), CK (Screw), CL (Screw), CM (Screw), CN (Screw), CO (Screw), CP (Screw), CQ (Screw), CR (Screw), CS (Screw), CT (Screw), CU (Screw), CV (Screw), CW (Screw), CX (Screw), CY (Screw), CZ (Screw).

Extras

Hardware Pack
F1

Assembly Manual
F2

Safe Use & Care Manual
F3

Charcoal Grill Cooking Guide
F4